Orion VX1000/VX2000
User Manual

v. 2.2.3

Table of Contents

1. About This Manual 5

2. Introduction 6

2.1 Functionality 6

2.2 Main Capabilities 6

3. Topologies 8

3.1 Topology 1 - Orion VX1000/VX2000 via SIP PBX 8

3.2 Topology 2 - Orion VX1000/VX2000 via H.323 PBX/Gatekeeper 9

3.3 Topology 3 - Orion VX1000/VX2000 via PBX and Direct Connectivity 10

3.4 Topology 4 - Direct Interaction with Orion VX1000/VX2000 11

3.5 Topology 5 - Connectivity with External Networks 12

3.6 Topology 6 - NAT Traversal Capabilities with Orion VX1000/VX2000 13

3.7 Topology 7 - Connectivity with Remote Endpoints 14

4. Physical Overview 15

4.1 Description 15

4.2 System Physical Interface 15

4.2.1 Buttons 15

4.2.2 LEDs 15

4.2.3 I/O Ports 16

5. Getting Started 17

6. Administration and Configuration 19

6.1 Overview 19

6.2 Login 19

6.3 Main Menu 19

6.4 User Management 21

6.4.1 Multi-Tier Partitioning 21

6.4.2 Users' Levels (Roles) 21

6.4.3 Sorting and Filtering 22

6.4.4 Creating a New User 22

6.4.5 Modifying User Information 23

6.4.6 Deleting a User 23

6.5 System Parameter Settings 23

6.5.1 Configuring Network Settings 23

6.5.2 SIP Configuration 26

6.5.3 H.323 Settings 32

6.5.4 Configuring Access Numbers 34

6.5.5 Date and Time 37

6.6 Maintenance 38
6.6.1 NFS Settings 40
6.6.2 Start Diagnostic Trace 40
6.7 Upgrade 41
7. Conferences 44
7.1 Summary 44
7.2 Conference Settings 45
7.2.1 Opening the Conference Settings Window 45
7.2.2 Sorting and Filtering 46
7.2.3 Creating a Conference 46
7.2.4 Other Conference Actions 47
7.3 Conferencing Parameters 48
7.4 Dialing Options 51
8. Leader Dashboard 53
8.1 Leader's Capabilities 53
8.2 Leader Login 53
8.3 Main Screen 54
8.4 Layouts 56
8.5 Show Statistics 56
8.6 Calling Participants 57
9. Firewall and NAT 59
9.1 Overview 59
9.2 Topologies 59
9.2.1 Orion VX1000/VX2000 in a DMZ 59
9.2.2 Orion VX1000/VX2000 behind a NAT 60
9.3 Firewall/NAT Settings 60
9.3.1 Blocking Ports 60
9.3.2 Enabling SIP and H.323 Sessions 60
9.3.3 RTP Traffic Ports Range 61
9.4 NAT Traversal in Orion VX1000/VX2000 61
9.4.1 Near-End NAT Traversal 61
9.4.2 Orion VX1000/VX2000 Setting for Near-End NAT Traversal 62
9.4.3 Far-End NAT Traversal 63
10. Appendix A: Precautions & Safety 64
10.1 Rack Precautions 64
10.2 Server Precautions 64
10.3 System Safety 64
10.3.1 Electrical Safety Precautions 64
10.3.2 General Safety Precautions 65

11. Appendix B: Rack Mounting 66

12. Appendix C: Technical Specification 68

1. About This Manual

This manual provides detailed guidance on the use of the Orion VX1000/VX2000. It includes a description of the product, its functionality, features, configuration, and operation.

2. Introduction

2.1 Functionality

Orion VX1000/VX2000 provides SIP and H.323 video and audio conferencing services for SMBs and enterprises. The product is a ready-to-use, stand-alone network appliance. The Orion VX1000/VX2000's web-based management system offers easy system configuration, conference creation, monitoring and conference control in real time.

2.2 Main Capabilities

Orion VX1000/VX2000 offers the following capabilities:

- **SIP and H.323 based:** Orion VX1000/VX2000 is a SIP and H.323 based conferencing system.
- **HD conferencing:** Orion offers wideband HD voice and HD video in resolutions of up to 720p.
- **Mixing:** A variety of conferencing devices are bridged by Orion's advanced audio/video mixing and adapting capabilities. Participants receive video and audio streams that are adapted to their device's media characteristics - codecs, rates, frame size and resolution.
- **Video/voice characteristics:**
  - Voice codecs: G.711a, G.711u, G.722, G.722.1[1]
  - Video codecs: H.264, MPEG4, H.263
  - Video resolution: Up to 720p/30fps
- **Conference Management:** Conferences can be managed by a leader, or set as automated ad-hoc conference rooms.
- **Leader Dashboard:** The Orion VX1000/VX2000 "Leader Dashboard", enables conference leaders to manage the conference. Upon logging into the Leader Dashboard, the leader can invite participants, modify conference parameters (such as mute and dominant speaker), and revoke/disconnect participants from the conference and view conference information.
- **Multiple Access Numbers:** Orion VX1000/VX2000 supports multiple access numbers. The Orion VX1000/VX2000's access numbers are pre-provisioned, and are dialed by conference participants directly or indirectly via their serving PBX.
- **Multiple Video Layout Options:** Equal-presence and dominant-based layouts are supported in the system. These layouts are modified automatically, when a participant enters or leaves the conference.
- **VIP Participants:** Orion VX1000/VX2000 allows VIP participants to join a conference without PIN code authentication.

[1] This product includes ITU-T G.722.1 (Polycom(R) Siren7TM) technology.

- **Registration:** Orion VX1000/VX2000 is provisioned for registration as a SIP endpoint in the network. An authentication option is provisioned for each registration process. SIP clients may register to Orion VX1000/VX2000's built-in SIP registrar.
- **Content Sharing:** Orion VX1000/VX2000 supports H.239, the H.323 content sharing standard and SIP-based content sharing in conjunction with Orion O desktop client.
- **NAT Traversal:** Orion VX1000/VX2000 provides near-end and far-end NAT traversal, enabling connectivity between entities (Orion VX1000/VX2000 / SIP or H.323 clients) which are behind not-SIP or H.323-aware NATs and firewalls.

3. Topologies

This section describes the network topologies supported by Orion VX1000/VX2000.

3.1 Topology 1 - Orion VX1000/VX2000 via SIP PBX

As shown below in Figure 3-1, the participants' connectivity with Orion VX1000/VX2000 is provided via the PBX that provides SIP registrar services to the users. In order to enhance existing services for multimedia conferencing, the PBX interacts with Orion VX1000/VX2000 using SIP.

Figure 3-1: Topology 1 - Orion VX1000 via SIP PBX

1. All SIP endpoints at the enterprise register with the PBX.
2. The PBX supports SIP Signaling
3. The Orion VX1000/VX2000 registers as an extension or is configured as a trunk in the PBX.
4. Orion VX1000/VX2000 provides Mixing/Bridging/Switching and signaling interoperability.
5. Voice-only clients can also participate in a video conference, making it a mixed Voice/Video conference.

3.2 Topology 2 - Orion VX1000/VX2000 via H.323 PBX/Gatekeeper

As shown below in Figure 3-2, the participants' connectivity with Orion VX1000/VX2000 is provided via the PBX/Gatekeeper that provides H.323 registration services to the users. In order to enhance existing services for multimedia conferencing, the PBX/Gatekeeper interacts with Orion VX1000/VX2000 using H.323.

Figure 3-2: Topology 2 - Orion VX1000 via H.323 PBX/Gatekeeper

1. The H.323 endpoints at the enterprise register with the PBX/Gatekeeper.
2. The PBX/Gatekeeper supports H.323 Signaling
3. The Orion VX1000/VX2000 registers as an extension or is configured as a trunk in the PBX/Gatekeeper.
4. Orion VX1000/VX2000 provides Mixing/Bridging/Switching and signaling interoperability.
5. Voice-only clients can also participate in a video conference, making it a mixed Voice/Video conference.

3.3 Topology 3 - Orion VX1000/VX2000 via PBX and Direct Connectivity

As shown below in Figure 3-3, the participants join the conference either through Orion VX1000/VX2000 or the PBX.

Figure 3-3: Topology 3 - Orion VX1000 via PBX and Direct Connectivity

1. SIP endpoints are registered with the Orion VX1000/VX2000 internal SIP registrar or the PBX.
2. The PBX supports SIP Signaling
3. The Orion VX1000/VX2000 registers as an extension or is configured as a trunk in the PBX.
4. SIP endpoints can call through the PBX, Orion VX1000/VX2000 registrar or directly to the Orion VX1000/VX2000
5. Orion VX1000/VX2000 provides Mixing/Bridging/Switching and signaling interoperability.
6. SIP endpoints can also connect directly using direct dialing (without registration)
7. Voice-only clients can also participate in a video conference, making it a mixed Voice/Video conference.

3.4 Topology 4 - Direct Interaction with Orion VX1000/VX2000

As shown below in Figure 3-4, the participants interact directly with the Orion VX1000/VX2000, via SIP, to connect to a conference room. The participants' PIN numbers and access codes are pre-provisioned through Orion's web-based management system.

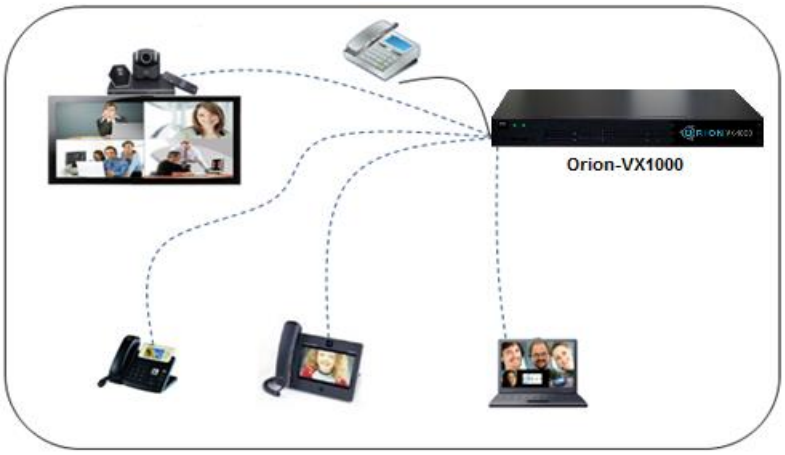

Figure 3-4: Topology 4 - Direct Interaction with Orion VX1000

1. Endpoints may be registered with the Orion VX1000/VX2000 SIP registrar.
2. SIP endpoints can call through the Orion VX1000/VX2000 registrar or directly to the Orion VX1000/VX2000 (without registration).
3. Orion VX1000/VX2000 provides Mixing/Bridging/Switching and signaling interoperability.
4. Voice-only endpoints can also participate in a video conference, making it a mixed Voice/Video conference.

3.5 Topology 5 - Connectivity with External Networks

As shown below in Figure 3-5, the connectivity between conference participants in an enterprise network and participants on public networks is provided through Orion VX1000/VX2000.

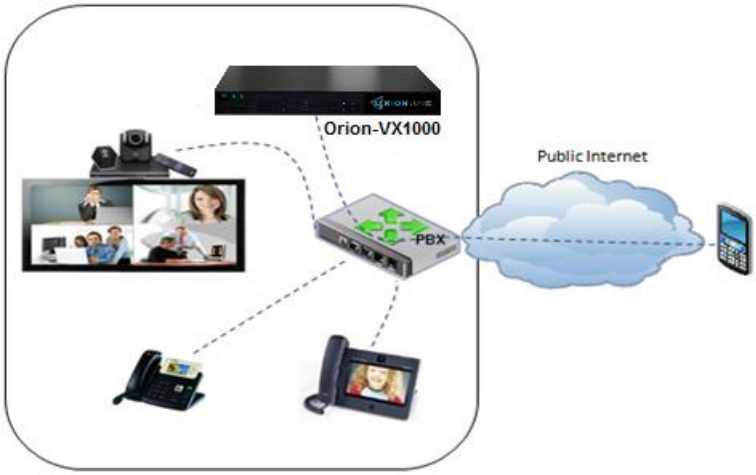

Figure 3-5: Topology 5 - Connectivity with External Networks

1. All SIP Endpoints register with the PBX.
2. The PBX supports SIP Signaling.
3. The Orion VX1000/VX2000 registers as an extension or is configured as a trunk in the PBX.
4. Endpoints can also connect via the external network.
5. Orion VX1000/VX2000 provides Mixing/Bridging/Switching and signaling interoperability.
6. Voice-only clients can also participate in a video conference, making it a mixed Voice/Video conference.

3.6 Topology 6 - NAT Traversal Capabilities with Orion VX1000/VX2000

As shown below in Figure 3-6, Orion VX1000/VX2000 provides NAT Traversal capabilities. The system may be located in a DMZ, with a public or private IP address, or in a LAN with a private address. In the below topology the participants and Orion VX1000/VX2000 are located in two separate, remote LANs:

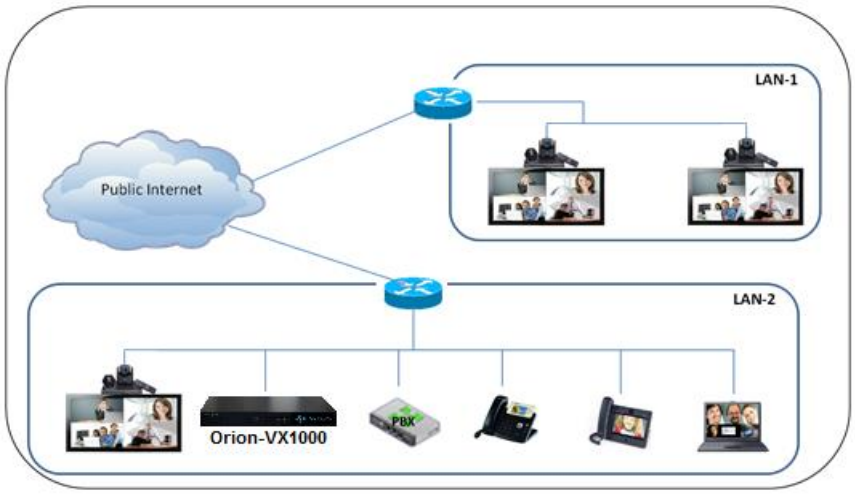

Figure 3-6: NAT Traversal Capabilities

1. Endpoints can register with the Orion VX1000/VX2000 SIP registrar or to the PBX
2. Remote office (LAN 1) can be connected to the Orion VX1000/VX2000 using built-in NAT Traversal capabilities.
3. Orion VX1000/VX2000 provides mixing/bridging/switching, signaling interoperability and NAT translation.
4. Voice-only endpoints can also participate in a video conference, making it a mixed voice/video conference

3.7 Topology 7 - Connectivity with Remote Endpoints

As shown below in Figure 3-7, Orion VX1000/VX2000 is located behind a NAT, with a private IP address. The participants interact directly with the Orion VX1000/VX2000, via SIP, to set and initiate a conferencing session.

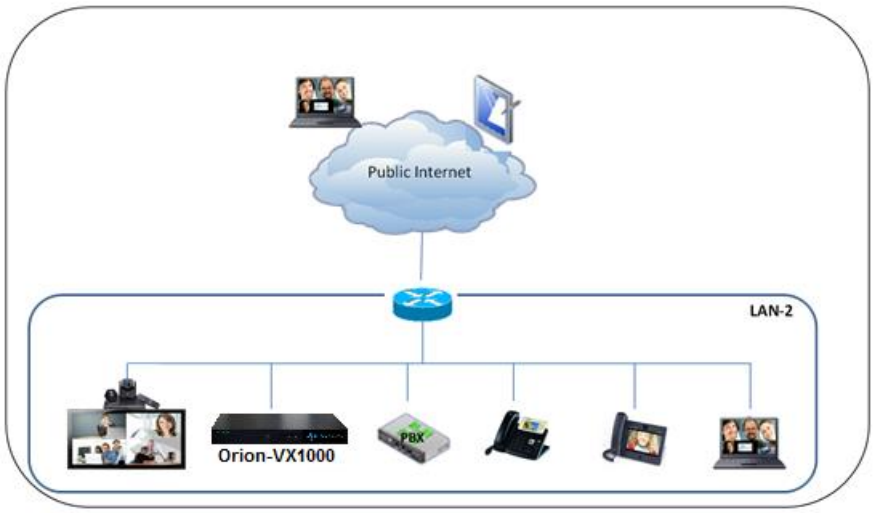

Figure 3-7: Connectivity with Remote Endpoints

1. All SIP Endpoints at the enterprise register to the PBX or the Orion VX1000/VX2000
2. The LAN firewall / router must have port forwarding configured to the Orion VX1000/VX2000
3. Remote employees connect to the conference call by registering with the Orion VX1000/VX2000.
4. Orion VX1000/VX2000 provides mixing/bridging/switching, signaling interoperability and NAT translation.

4. Physical Overview

4.1 Description

The front view of the Orion VX1000 is depicted in Figure 4-1 below.

Figure 4-1: Orion VX1000 Front View

4.2 System Physical Interface

The system physical interface of Orion VX1000/VX2000 includes panel-based buttons, LEDs and I/O ports.

4.2.1 Buttons

There are two push buttons located on the front of the chassis: reset and power on/off buttons.

Reset - The Reset button reboots the system.

Power - The Power button is used to turn on and turn off the system. Turning off the system eliminates the main power but maintains standby power. In order to service the system, the server should be shut down and the AC power cord should be unplugged.

4.2.2 LEDs

The two control panel LEDs is located at the front of the chassis and provide information related to following system functions.

HDD - Indicates hard drive activity when flashing.

Power - Indicates power is being supplied to the system. This LED is illuminated when the system is operating.

4.2.3 I/O Ports

The front panel has 2x USB2 ports, as shown in Figure 4-2:

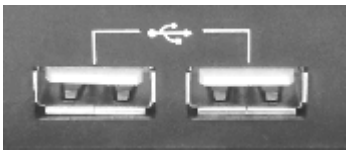

Figure 4-2: Front Panel Ports

Figure 4-3 shows a representation of the Orion VX1000/VX2000 I/O ports as they apper on the rear of the chassis.

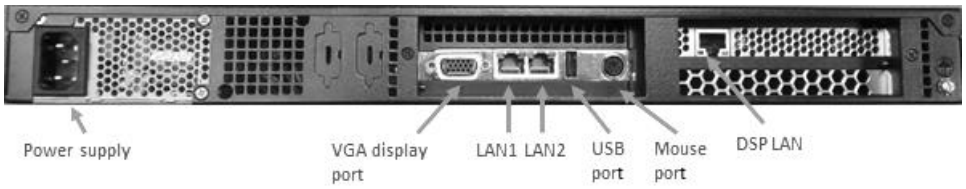

Figure 4-3: Rear Panel Ports

5. Getting Started

Step 1: Follow the precautionary and safety instructions

Follow the precautionary and system safety instructions that appear in Appendix A of this User Manual. To install the system, choose a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated. If you intend to install the system in a rack, choose a location near a grounded power outlet, and follow the instructions in Appendix B of this User Manual.

Step 2: Unpack your Orion VX1000/VX2000 system

Step 3: Connect the cables

Connect the cables to your Orion VX1000/VX2000 system:

1. Connect the short CAT-6 cable that is provided with the system in a loop as shown in Figure 5-1 below.
2. Connect the Orion VX1000/VX2000 "LAN" port to the Ethernet port of your computer using a CAT-6 cable.
3. Connect the power cable first to the Orion VX1000/VX2000 and then to the power outlet. Press the power-on button located on the front panel of the Orion VX1000/VX2000 to start the system. (Server and application load time is approximately 5 minutes).

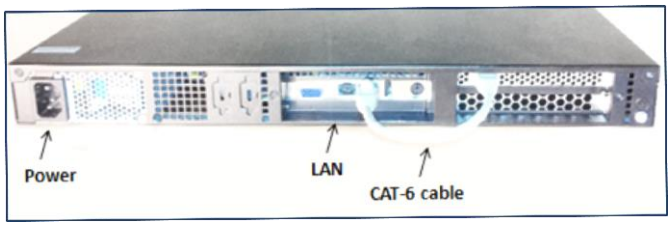

Figure 5-1: Cable Connectivity

Step 5: Change Orion VX1000/VX2000's IP address

Orion VX1000/VX2000 is provided with a default IP address "**192.168.0.1**" that should be modified before using the system.

To change the IP address:

Step 4: Apply the static IP address "192.168.0.2" to your Computer

Change your computer's network settings and apply the following static IP address: "**192.168.0.2**".

1. In a web browser, navigate to the default IP address - 192.168.0.1. Upon the appearance of the login screen, enter the default user name and password (admin, admin).

   Note: *Orion VX1000/VX2000 web based GUI supports Internet Explorer 8 or newer, Google Chrome 20 or newer, Mozilla Firefox 14 or newer and Safari 5 or newer.*

2. Select **System Configuration > Network Settings, as shown in** Figure 5-2 **below:**

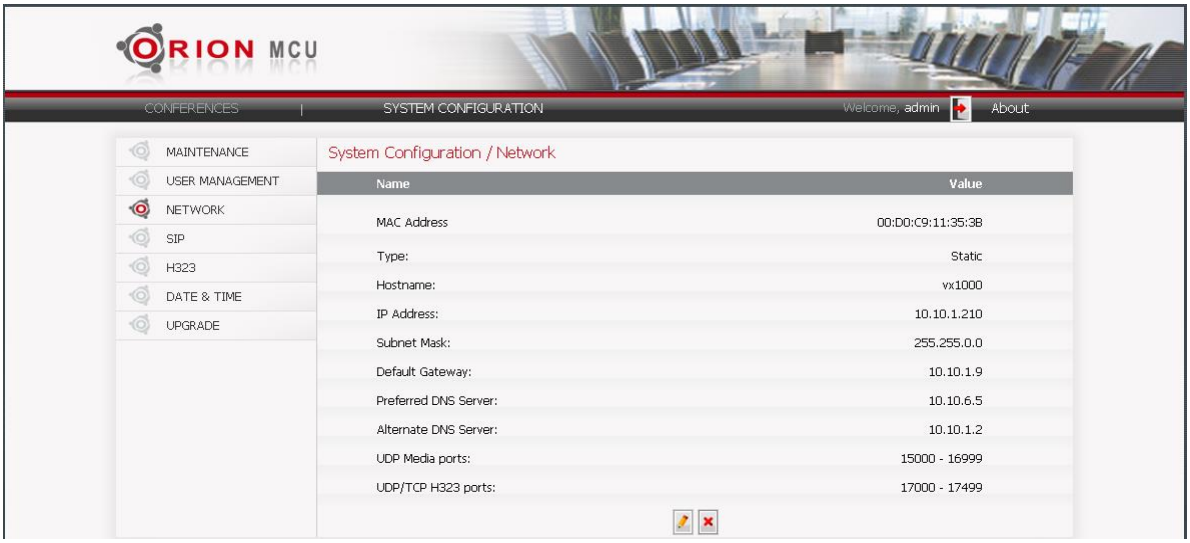

Figure 5-2: Network Settings Window

3. Click Edit and then modify the IP Address field.
4. Click Save . A confirmation message appears, as shown in Figure 5-3 below:

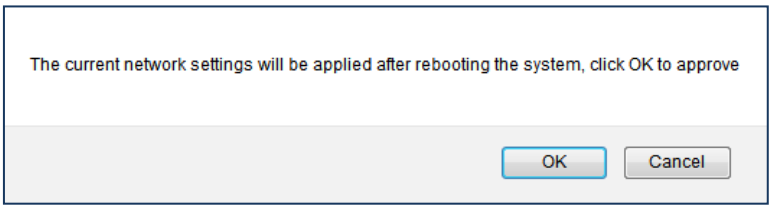

Figure 5-3 - Network settings confirmation message

5. Click **OK**.
6. The system reboots and the changes are applied.

Note: *If* ***DHCP*** *was chosen, the simplest way to see the Orion VX1000/VX2000 IP Address is to connect a monitor and restart the machine. The IP Address will appear in the Login Screen at the end of the system load.*

Step 6: Connect to the Orion VX1000/VX2000 IP Address from your Network

Restore the original network configuration on your computer, and connect the Orion VX1000/VX2000 to your network.

Connect to Orion VX1000/VX2000 management system by entering the Orion VX1000/VX2000's IP address in a web browser.

The Orion VX1000/VX2000 is now connected to your network

---

6. Administration and Configuration

6.1 Overview

The administration and configuration of the Orion VX1000/VX2000 are performed using the web-based management system.

After setting up the system – and prior to conference-service creation – the system should be configured according to the steps described in this section.

6.2 Login

After entering the Orion VX1000/VX2000's IP address in your web browser, the **Login** window appears. Enter the default user name and password (**admin, admin**).

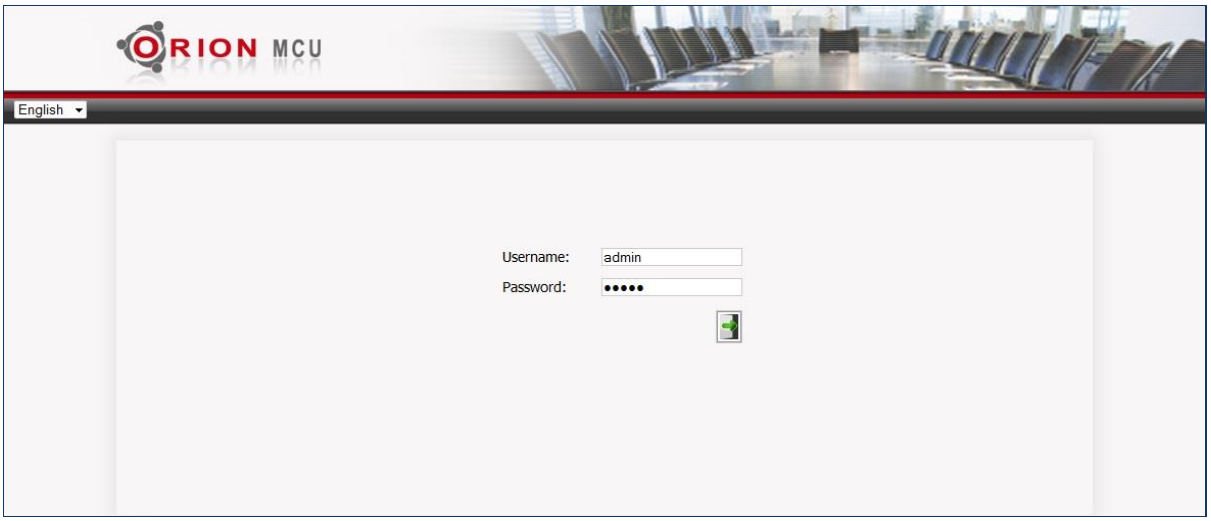

Figure 6-1: Login Window

***Note**: It is recommended to change the default admin password, before starting to use the system.*

***Note:** The user can choose a language from the system's pre-defined list of languages by using the drop down menu on the top-left side of the screen.*

6.3 Main Menu

The **Main Menu** window appears when the user has logged in. This window is divided into two main categories:

a) Conferences

b) System Configuration

Prior to conference creation, system settings must be configured.

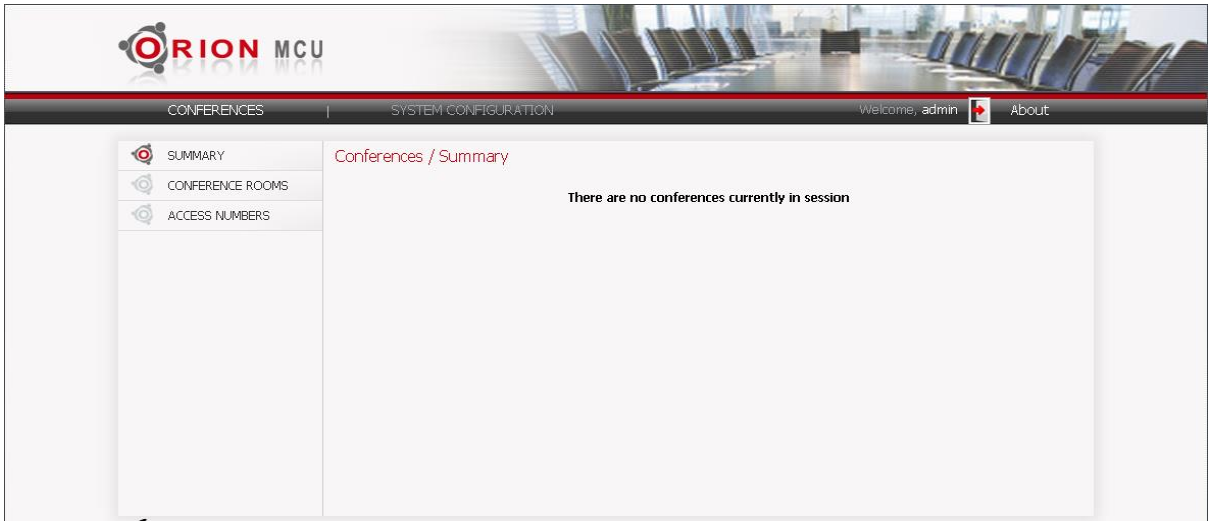

Figure 6-2: Main Menu Window

***Note**: To log out, click the logout icon (red), at the top-right of the screen*

***Note:** To view Orion VX1000/VX2000 component versions, click **About**, at the top-right of the screen.*

6.4 User Management

The **User Management** window allows the administrator to create a new user, update existing user information, or remove a user from the system, as shown in Figure 6-3 below:

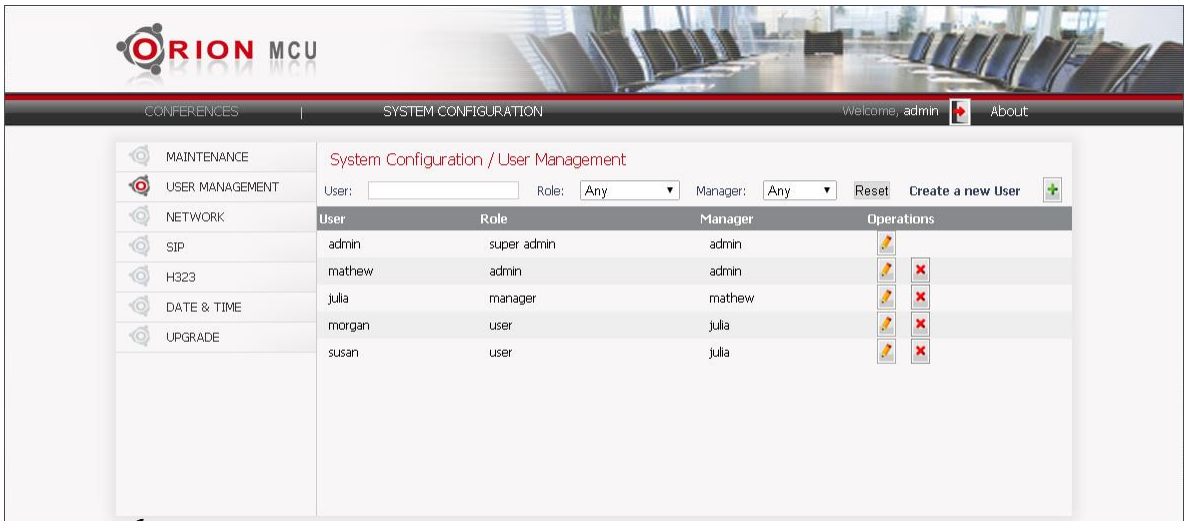

Figure 6-3: User Management Window

6.4.1 Multi-Tier Partitioning

Orion VX1000/VX2000 provides multi-tier partitioning functionality. This functionality enables the **admin** user to provide different and separate groups, which are independently managed. Each group has its own manager and users. The information of one group cannot be viewed, shared or managed by any other groups' members.

6.4.2 Users' Levels (Roles)

The **Role** field on the **User Management** screen represents the capabilities of a user in the system. The **Manager** field represents the manager of the group the user belongs to. The users' levels or roles in Orion VX1000/VX2000, are listed below:

super admin

The **super user** is the default administrator and has the highest role in the system. This user has access to all the capabilities the system offers and can perform all the actions and view/edit all the data on the system.

The super admin user can create all kinds of users and manage them. This user cannot be deleted and is the root of all other users.

admin

The **admin** users have all the capabilities of the super admin users. The **admin** users can be created and deleted.

manager

The **manger** users are enabled to manage their own group with no access to any other group.

They are enabled to create/manage conferences, users and access numbers associated with their own group.

user

Users are enabled to create/provision/manage conferences and create access numbers, all associated only to their unique managed group.

A **user** in a group cannot view or access any information from another group.

6.4.3 Sorting and Filtering

The columns **User, Role,** and **Manager** can be sorted in ascending or descending order by clicking on a column header.

The user is allowed to filter the users' database, using the toolbar at the top of the screen, and according to the parameters listed below:



- **User**. A full user name or a partial string from it.
- **Role.** The role, using the role drop-down menu.
- **Manager.** The manager, using the manager drop-down menu.

Pressing on **Reset**, resets the filter and the original list re-appears on the screen.

6.4.4 Creating a New User

To Create a New User:

1. In the **System Configuration > User Management** window, click on **Create a new User** button. The **Create a new User** window opens:

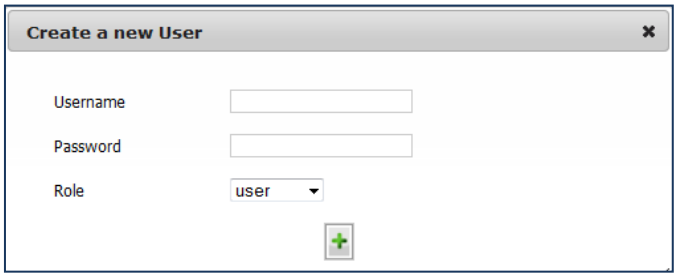

Figure 6-4: Create a New User Window

2. Enter a **Username** and a **Password**.
3. Select a **Role** for the user.
4. Click to add the new user to the system.

6.4.5 Modifying User Information

To Modify User Information:

1. In the **System Configuration > User Management** window, click Edit in the **Operations** column of the user to be edited.

   The Edit User window opens:

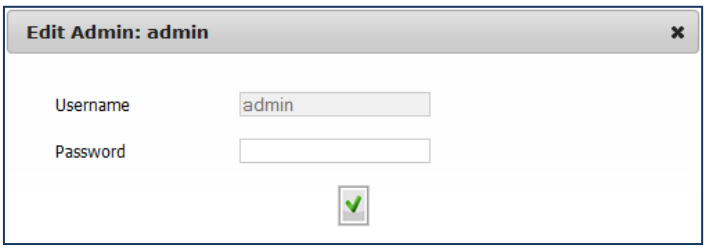

Figure 6-5: Edit User Window

2. Modify the information as needed and click **Save** .

6.4.6 Deleting a User

To Delete a User from the System:

1. In the **System Configuration /User Management** window, click **Delete** in the **Operations** column of the user to be removed.
2. A message appears, requesting confirmation to delete the user:

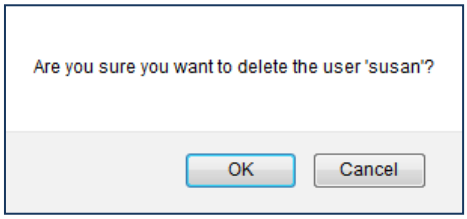

3. Click **OK**. The user is deleted from the system users' list.

6.5 System Parameter Settings

Before creating a conference, the system parameters must be provisioned.

6.5.1 Configuring Network Settings

Network settings are configured in the **Network** window, as shown in Figure 6-6 below.

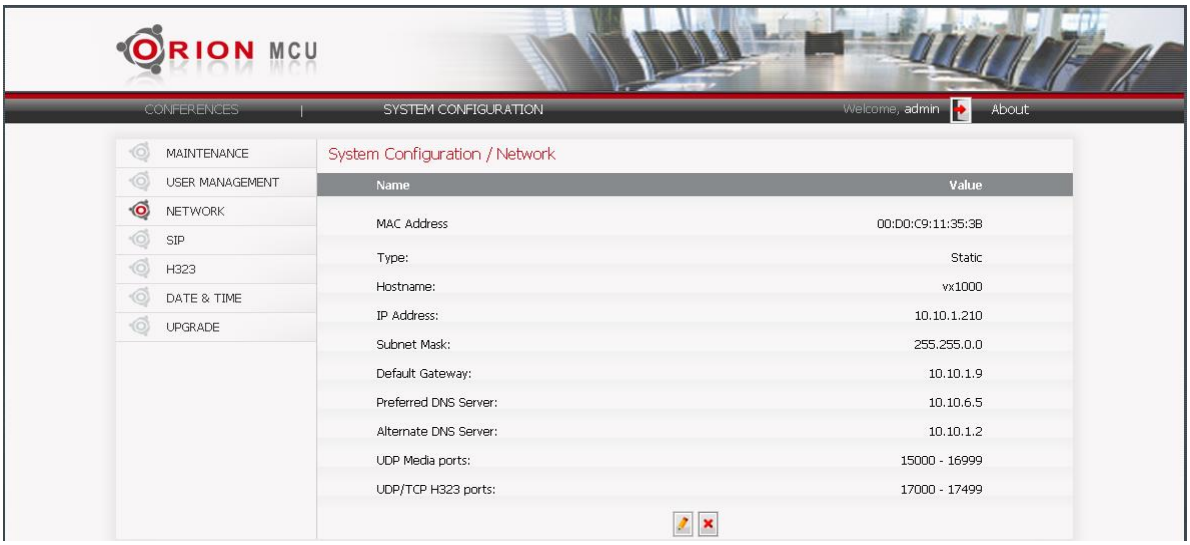

Figure 6-6: Network Settings Window

To Configure Network Settings:

1. Select **System Configuration > Network**.
2. Click **Edit**. Network parameters become editable.

Figure 6-7: Network Settings Editing

***Note**: If the **DHCP** parameter is selected, then only the Hostname parameter can be edited. All other network parameters are grayed out.*

Figure 6-8: Network Setting Window

3. Edit the network parameters, as needed, according to the following table:

Parameter	Definition	Description
Hostname	String	The name of the Orion VX1000/VX2000 system in your network. It's highly important to configure the **Hostname** as defined in the DNS of the LAN or the WAN where the Orion VX1000/VX2000 is deployed. Orion VX1000/VX2000 is using the hostname value in SIP calls with emphasis on NAT Traversal scenarios. Example: orion1.orionmcu.com
IP Address	IP address	The Orion VX1000/VX2000 system's IP Address
Subnet Mask	Net-mask	The Orion VX1000/VX2000 system's subnet mask
Default Gateway	IP address	The IP Address of the default gateway
Preferred DNS Server	IP address	The IP Address of the preferred DNS Server
Alternate DNS Server	IP address	The IP Address of the alternate DNS Server
UDP Media Ports	integer	The first UDP/TCP port from the range of the ports used by MCU for Media and for H.323. The range is calculated automatically using the first port value.

Table 6-1: Network Parameters

4. **Note:** DNS definition is highly important for system upgrades and SIP calls with domain names involved.
5. To revert to the previous values, click **Revert**.
6. Click **Save** to save the configuration.

   A message appears, requesting confirmation to restart the system. The changes are applied upon restarting the system.

6.5.2 SIP Configuration

SIP parameters are configured in the **SIP** window, as shown in Figure 6-9 below.

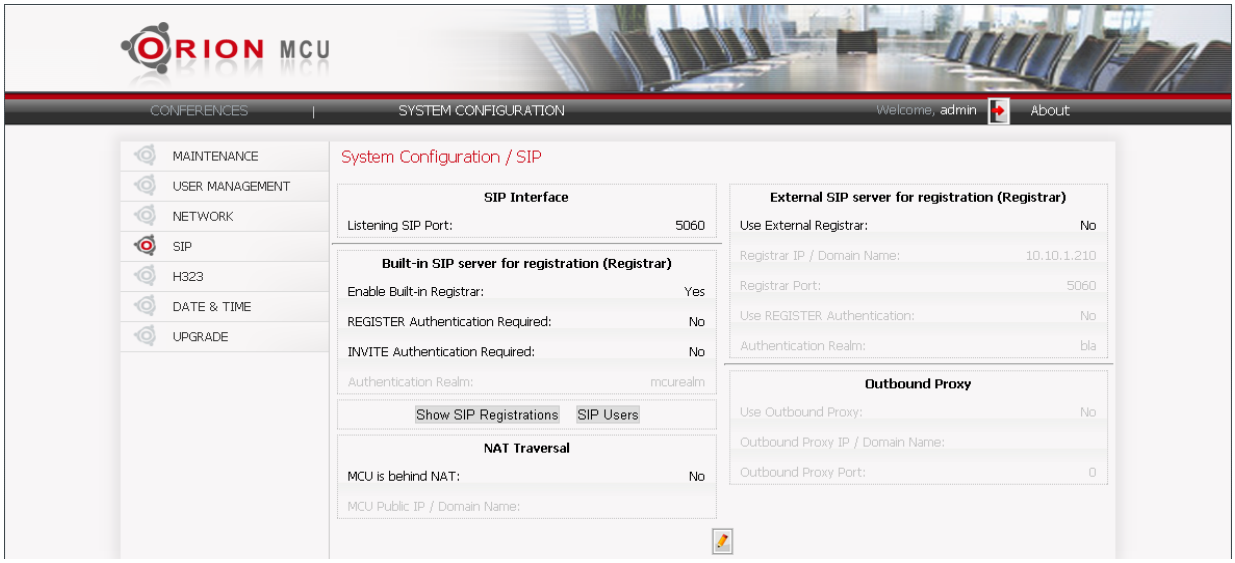

Figure 6-9: SIP Configuration

To Configure SIP Settings:

1. Select **System Configuration > SIP**
2. Click **Edit**. The SIP settings become editable.

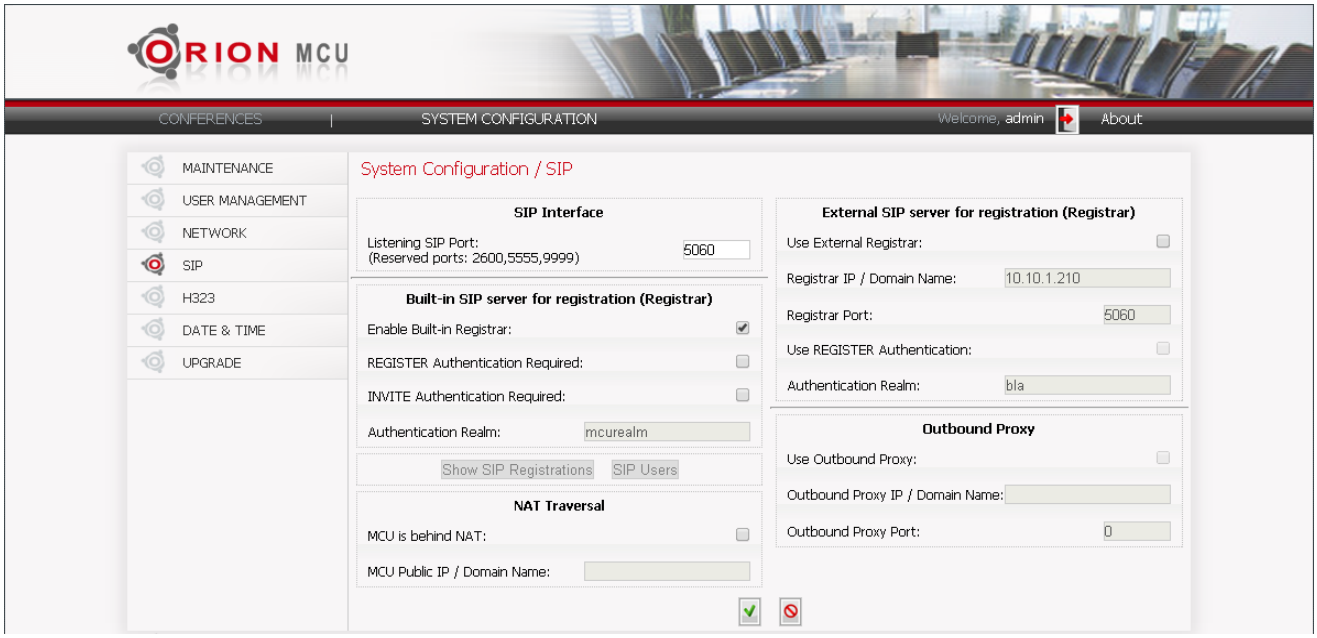

Figure 6-10: SIP Parameters Editing

3. Edit the SIP parameters. The SIP parameters are described in the following tables:

SIP Interface

Parameter	Values	Description
Listening SIP Port	Port	This is Orion VX1000/VX2000's built-in listening SIP port, used for registration of SIP clients, session establishments and interactions with SIP external entities.

Table 6-2: SIP Interface Settings

Built-in SIP server for registration (Registrar)

Parameter	Values	Description
Enable Build-in Registrar	Check-box (Yes/No)	If this box is checked then Orion VX1000/VX2000 can be used as a registrar for SIP clients.
REGISTER Authentication Required	Check-box (Yes/No)	"REGISTER Authenticate Required" is a check box that determines the authentication of the managed users to Orion VX1000/VX2000. Managed users are users that are provisioned in the system. If the box is checked, non-managed users are not allowed to register with the system
INVITE Authentication Required	Check-box (Yes/No)	"INVITE Authenticate Required" is a check box that determines the authentication of the managed users to Orion VX1000/VX2000. Managed users are users that are provisioned in the system. If the box is checked, the incoming calls from non-managed users are not allowed. **Note**: INVITE authentication is not performed, even if the checkbox is set to YES, when an incoming call originates from a user that is registered to the external SIP server (registrar).
Authentication Realm	String	Authentication realm of Orion VX1000/VX2000 built-in Registrar for REGISTER digest challenge, any string can be used.
SIP Users		Used to view and manage the SIP users in the system. This function is applicable only when Built-in Registrar is enabled. For more details, please refer to **SIP Users**, section 6.5.2.1 below. ***Note:*** *SIP user number* ***must not*** *be equal to access number or conference number defined in the system and vice versa.*
Show SIP Registrations		Used to display the system's registered users. This function is applicable only when Built-in Registrar is enabled. For more details, please refer to **Show Users**, section 6.5.2.2 below.
NAT Traversal		
MCU is behind NAT	Check-box (Yes/No)	States whether the MCU is behind a NAT.
MCU Public IP / Domain Name	IP address	Public IP address or domain name, used for near-end NAT traversal (see section 9.4.1 below).

Table 6-3: Built-in Registrar Settings

External SIP server for registration (Registrar)

Parameter	Values	Description
Use External Registrar	Check-box (Yes/No)	If an external registrar is configured, Orion VX1000/VX2000 registers access numbers and conference rooms to the external registrar.
Registrar IP/ Domain Name	IP address	The external registrar IP address or domain name
Registrar Port	Port	The external registrar SIP port
Use REGISTER Authentication	Check-box (Yes/No)	Indicates whether the registration requires authentication.

Parameter	Values	Description
Authentication Realm	String	The string must be equal to the configured value in the external registrar - this value is used in 401 response to REGISTER messages. (Authentication is supported for REGISTER only).

Table 6-4: External Registrar Settings

Outbound Proxy

Parameter	Values	Description
Use Outbound Proxy Server	Check-box (Yes/No)	States whether an outbound proxy server is used. In case that the Orion VX1000/VX2000 is behind NAT or configured with public IP, and NAT traversal (Near or Far end) is provided by Orion VX1000/VX2000, the Outbound proxy server **should not** be configured.
Outbound Proxy Server IP	IP address	The Outbound proxy server IP address.
Outbound Proxy Server Port	Port	The Outbound proxy server port

Table 6-5: Outbound Proxy Settings

3. To revert to the previous values, click Cancel.
4. Click **Save** to save the configuration.

   If any SIP parameter has been modified, then all the active calls will be dropped and the application will restart. In this case the user's confirmation is required:

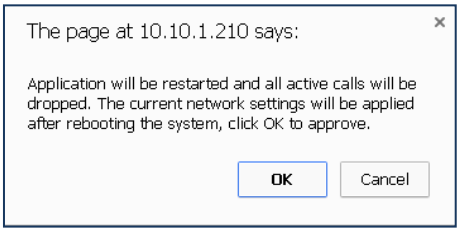
The page at 10.10.1.210 says:
Application will be restarted and all active calls will be dropped. The current network settings will be applied after rebooting the system, click OK to approve.
OK
Cancel

5. Click **OK**.

   The application restarts, and the new configuration is applied.

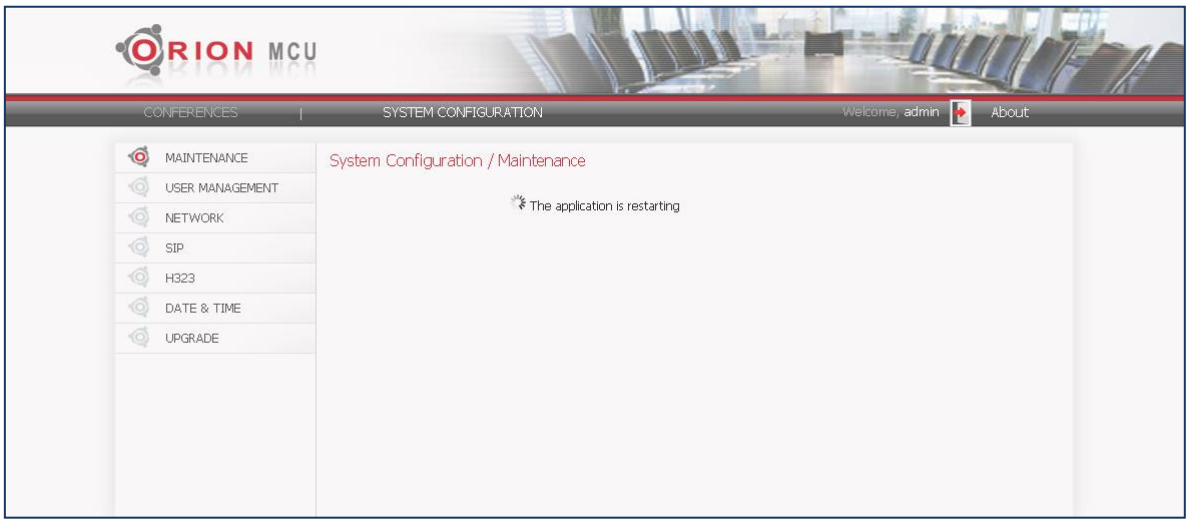

Figure 6-11: Restart after SIP Settings

6.5.2.1 SIP Users

You can view and manage the Orion VX1000/VX2000's SIP users, by clicking on **SIP Users** button. This button is applicable, if the **Built-in Registrar** is enabled.

If this parameter is not enabled, enable it and click on **Save**, before moving forward. The system shall restart and the changes shall be applied.

To View the Users:

Click the **SIP Users** button. The following window is displayed:

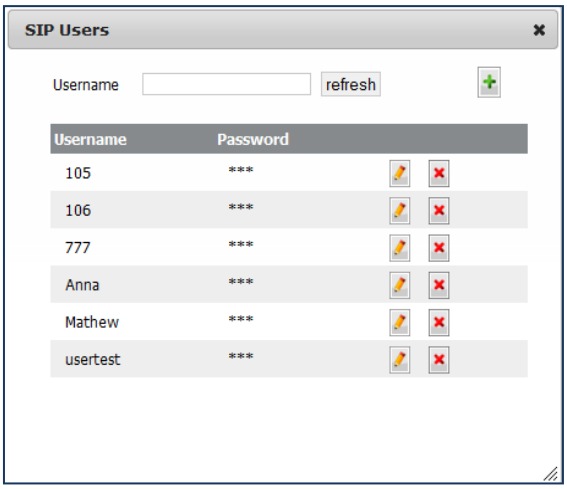

Figure 6-12: SIP Users Window

The columns on this screen can be sorted in ascending or descending order by clicking on any of the column headers.

To Filter the Displayed List

The user is enabled to filter the displayed list, using the toolbar at the top of the table:

The full Username or a partial string from it provides the filtering criteria.

Pressing on **Refresh** resets the filter and the original list re-appears on the screen.

To Delete a SIP User:

To delete a user click on . A dialog-box pop-up for user's confirmation.

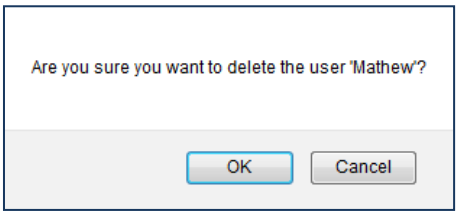

To Modify a SIP User:

To modify a user's **password:**

1. Click on the following window opens:

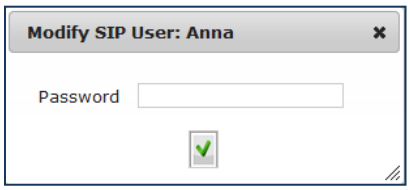

2. Enter the new password.
3. Click on the **Save** button.

To Add a New SIP User:

1. Click on button, the following window appears:

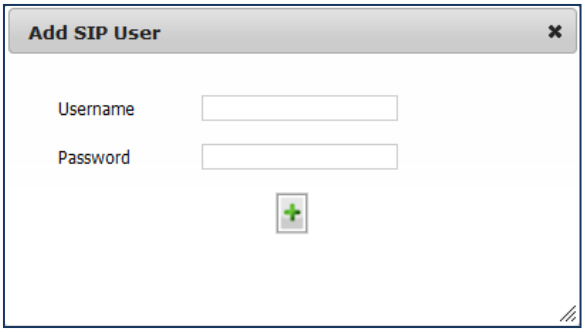

Figure 6-13: Adding SIP User

2. Enter the **Username** and the **Password** of the SIP User
3. Click on to confirm the action.

A new user has been added to the system.

6.5.2.2 Show SIP Registrations

You can view the Orion VX1000/VX2000's registered SIP users.

To View the Registered Users:

Click the **Show SIP Registrations** button. The following window is displayed:

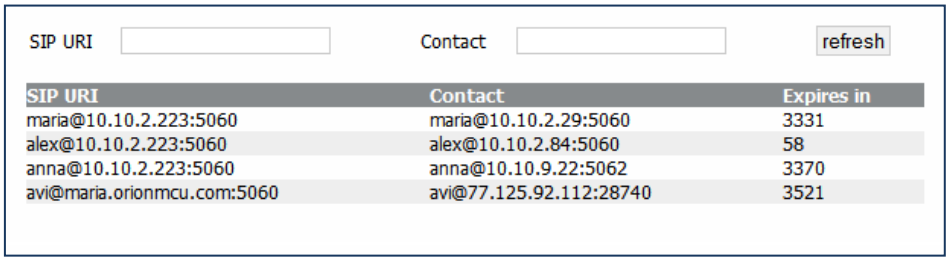

Figure 6-14: Show SIP Registrations Window

The columns on this screen can be sorted in ascending or descending order by clicking on any of the column headers.

Filtering the Displayed List

The user is enabled to filter the displayed list, using the toolbar at the top of the table:

Filtering criteria are as follows:

- SIP URI. Type a full SIP URI or a partial string of it.
- Contact. Type a full Contact or a partial string of it.

Pressing on **Refresh** resets the filter and the original list re-appears on the screen.

6.5.3 H.323 Settings

H.323 parameters are configured in the **H.323** window, as shown in Figure 6-9 below:

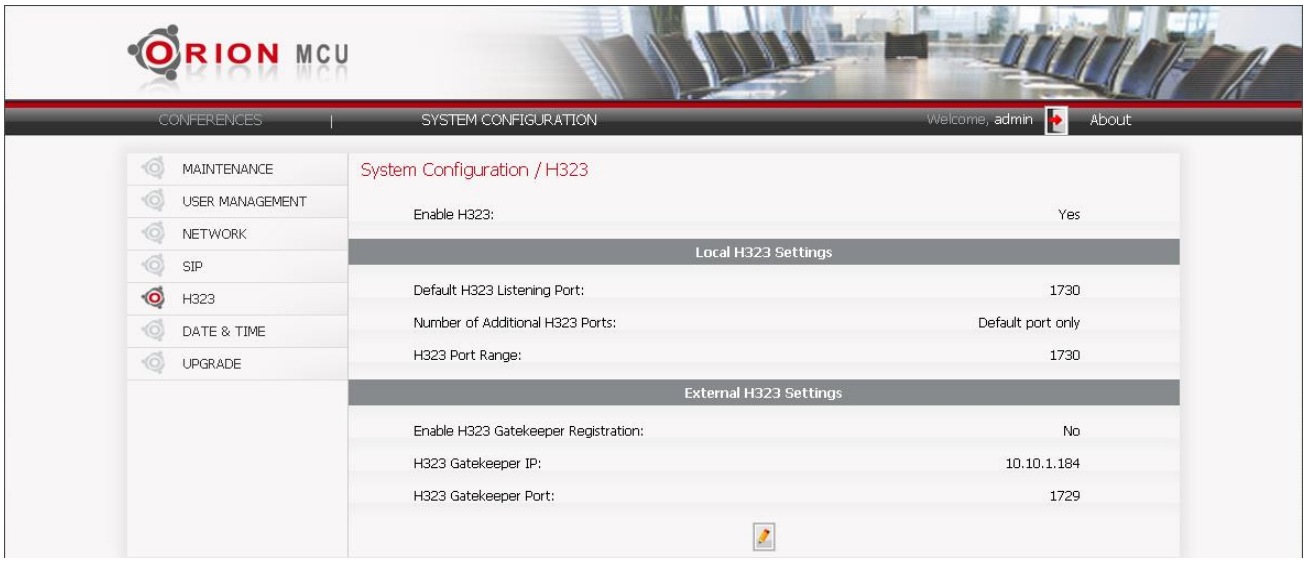

Figure 6-15: H.323 Screen

To Configure the H.323 Parameters:

1. Select **System Configuration > H.323**
2. Click **Edit**. The H.323 settings become editable.

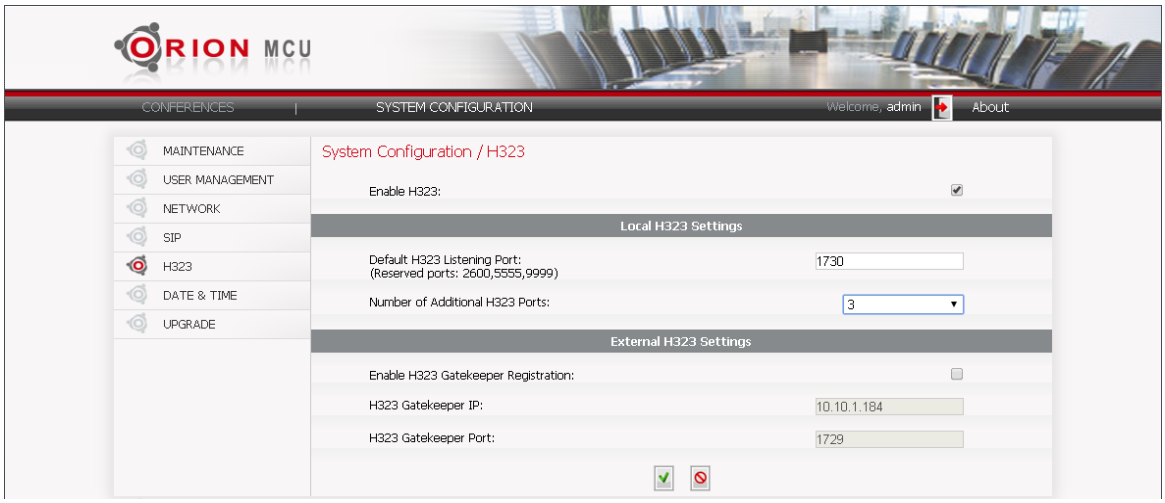

Figure 6-16: Editing H.323 Parameters

3. Edit the H.323 parameters. The H.323 parameters are described in the following table:

Parameter	Values	Description
Enable H.323	Check-box (Yes/No)	If this box is checked, H.323 is enabled in the system.
Local H.323 Settings		
Default H.323 Listening Port	Number	If H.323 is enabled, then this parameter is mandatory. The default H.323 port 1720.
Number of Additional H.323 Ports	Drop-down menu	If the user intends to establish direct H.323 sessions to different access numbers or conferences he needs to set this parameter. For each H.323 conference, a dedicated port is needed. The total number of H.323 ports should be compatible with the number of potential H.323 conferences in the system. Maximum number of ports is 20.
External H.323 Settings		
Enable H.323 Gatekeeper Registration	Check-box (Yes/No)	If this box is checked, registration to the gatekeeper is enabled in the system.
H.323 Gatekeeper IP	IP address	The IP address of the gatekeeper.
H.323 Gatekeeper Port	Number	The port number of the gatekeeper.

Table 6-6: H.323 Parameters

4. To revert to the previous values, click Cancel.
5. Click **Save** to save the new settings.

If any parameter has been modified, then all the active calls will be dropped and the application will be restarted. In this case the user's confirmation is required:

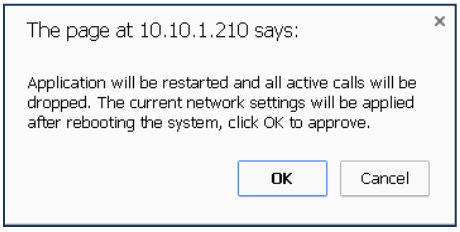
The page at 10.10.1.210 says:
Application will be restarted and all active calls will be dropped. The current network settings will be applied after rebooting the system, click OK to approve.
OK
Cancel

Content Sharing:

Orion VX1000/VX2000 supports H.239, the content sharing standard for H.323. This capability enables the clients who support this standard, to both share their content and present the dominant speaker and the presenter, on their selected layout (equal or dominant).

Figure 6-17 shows the content sharing possible scenarios:

- H.323 endpoint that supports H.239 - Is enabled to send and receive both content and conferencing participants' layout.
- H.323 endpoint that do not support H.239 - Is enabled to send and receive conferencing participants' layout, and receive content as a part of the regular conferencing layout..
- SIP endpoint - Is enabled to send and receive conferencing participants' layout, and receive content as a part of the regular conferencing layout.

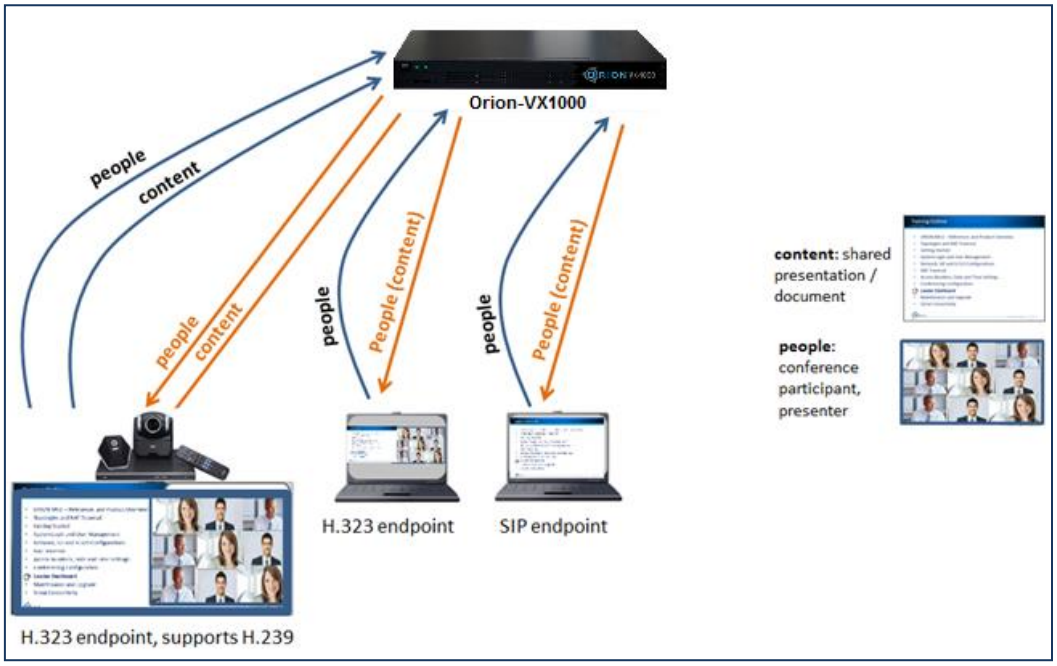

Figure 6-17: Content Sharing

6.5.4 Configuring Access Numbers

An access number is a number which a participant dials to connect with the Orion VX1000/VX2000. An IVVR directs the user to enter the conference number and the PIN code. However, access numbers are not mandatory, since a participant can also join a conference by dialing directly the conference number.

A single Orion VX1000/VX2000 supports multiple access numbers. The access numbers are provisioned via the Orion VX1000/VX2000 GUI, as shown in this section. If the number dialed by

a participant does not match any of the provisioned access numbers (or conference numbers), the call is declined.

To Configure Access Numbers:

1. Select **Conferences > Access Numbers**. The Access Numbers window opens:

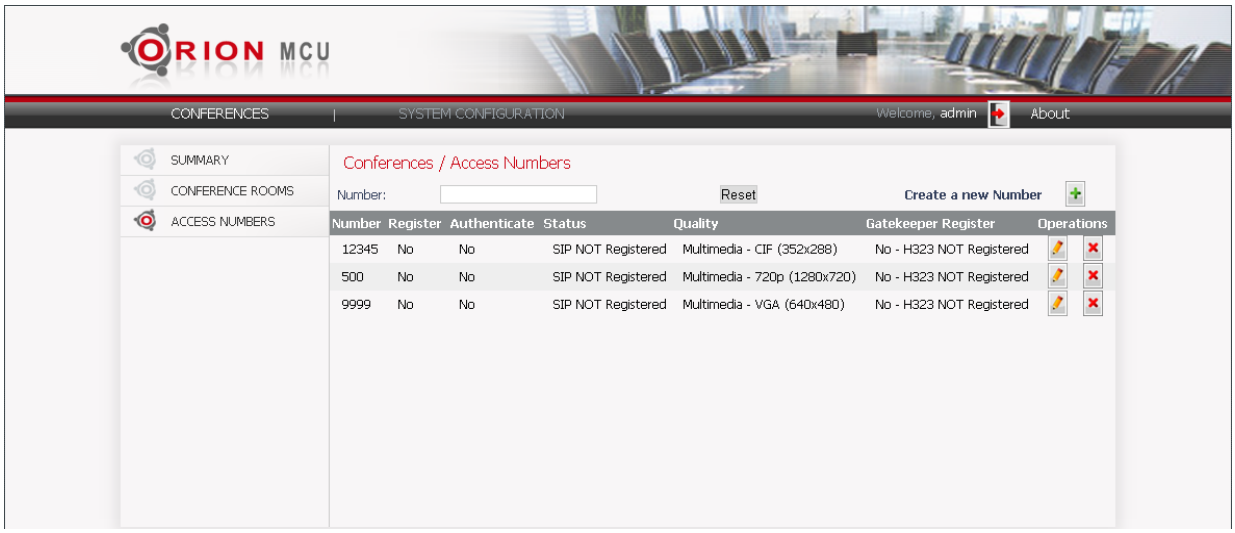
ORION MCU
CONFERENCES
SYSTEM CONFIGURATION
Welcome, admin
About
SUMMARY
CONFERENCE ROOMS
ACCESS NUMBERS
Conferences / Access Numbers
Number:
Reset
Create a new Number
Number Register Authenticate Status Quality Gatekeeper Register Operations
12345 No No SIP NOT Registered Multimedia - CIF (352x288) No - H323 NOT Registered
500 No No SIP NOT Registered Multimedia - 720p (1280x720) No - H323 NOT Registered
9999 No No SIP NOT Registered Multimedia - VGA (640x480) No - H323 NOT Registered

Figure 6-18: Access Numbers Provisioning

Please note that the users can view and manage only the access numbers which belong to their own group (see section 6.4.1 for **Multi-Tier Partitioning)**.

6.5.4.1 Create a New Access Number

To create a new access number:

1. Click **Create** , for a new Number.

   The **Create a new Number** window opens.

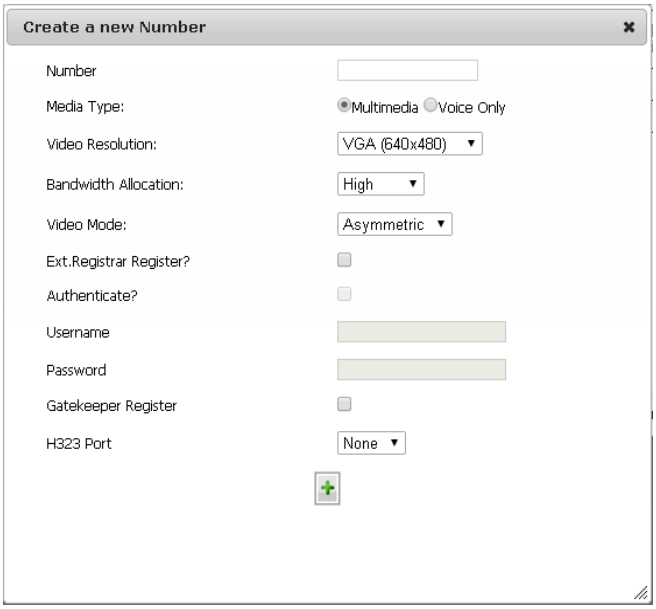

Figure 6-19: Create a New Number Window

2. In the **Number** field, type the new access number.

   Note: *Access number* ***must not*** *be equal to SIP user number or conference number defined in the system and vice versa.*

3. In the **Media Type** field, select one of the following:
   - Multimedia
   - Voice Only
4. When Multimedia has been selected, in the **Video Resolution** field, select one of the following:
   - 720p (1280x720)
   - VGA (640x480)
   - CIF (352X288)
5. Select the Bandwidth Allocation:
   - High
   - Medium
   - Low
6. Select Video Mode:
   - Symmetric
   - Asymmetric

   Asymmetric: The transmitted and the received video resolutions are not identical.

   Symmetric: The transmitted and the received video resolutions are identical.

   For 720p and VGA resolutions both modes can be selected (default= "Asymmetric"). For CIF resolution only “Symmetric” mode is available.
7. To register the access number to the registrar, select Ext. **Ragister Register?**:
   - To authenticate the registration, select **Authenticate**, and enter **Username** and **Password**.
8. For H.323 sessions, to register the access number to gatekeeper, select **Gatekeeper Register.**
9. For H.323 sessions, select a port from the listed ports, using the drop-down menu.
10. Click **Save** to save the configuration.

6.5.4.2 Modify an Existing Access Number

To Edit An Existing Access Number Parameters:

1. In the **Access Numbers** window, click in the **Operations** column of the number to be edited. The **Edit Access Number** window opens.

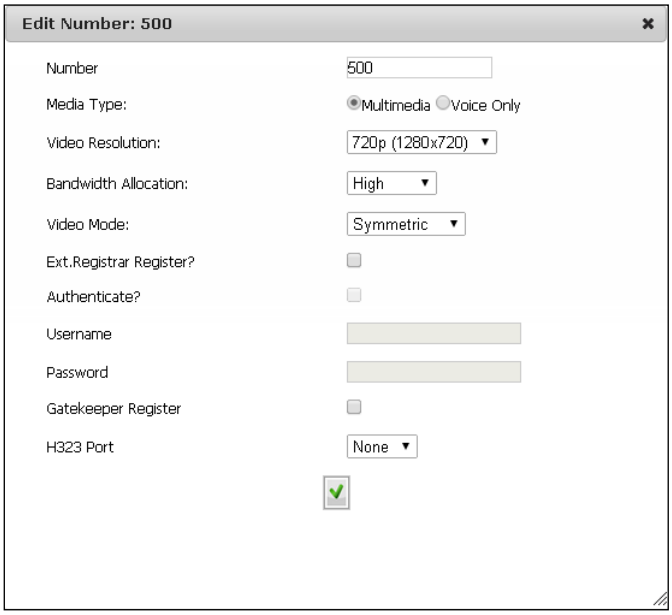

Figure 6-20: Edit Number Window

2. Modify the settings as needed and click **Save**.

6.5.4.3 Delete an Access Number

To delete an access number from the list:

- In the Access Numbers window, click in the Operations column of the number to be deleted.

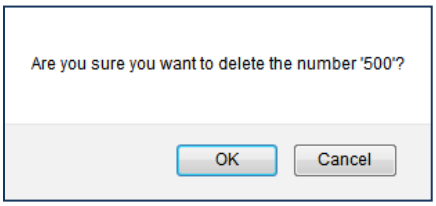

6.5.4.4 Sorting and Filtering

The access numbers can be sorted in ascending or descending order by clicking on the **Number** header.

The user is allowed to filter the access numbers by entering a full or partial number, using the toolbar at the top of the screen:

Pressing on **Reset**, resets the filter and the original list re-appears on the screen.

6.5.5 Date and Time

The date, time and time zone can be set manually, or an NTP server can be used to correct manual settings.

To Set the Date and Time:

1. Select **System Configuration > Date & Time**.

   The **Date & Time** window opens.

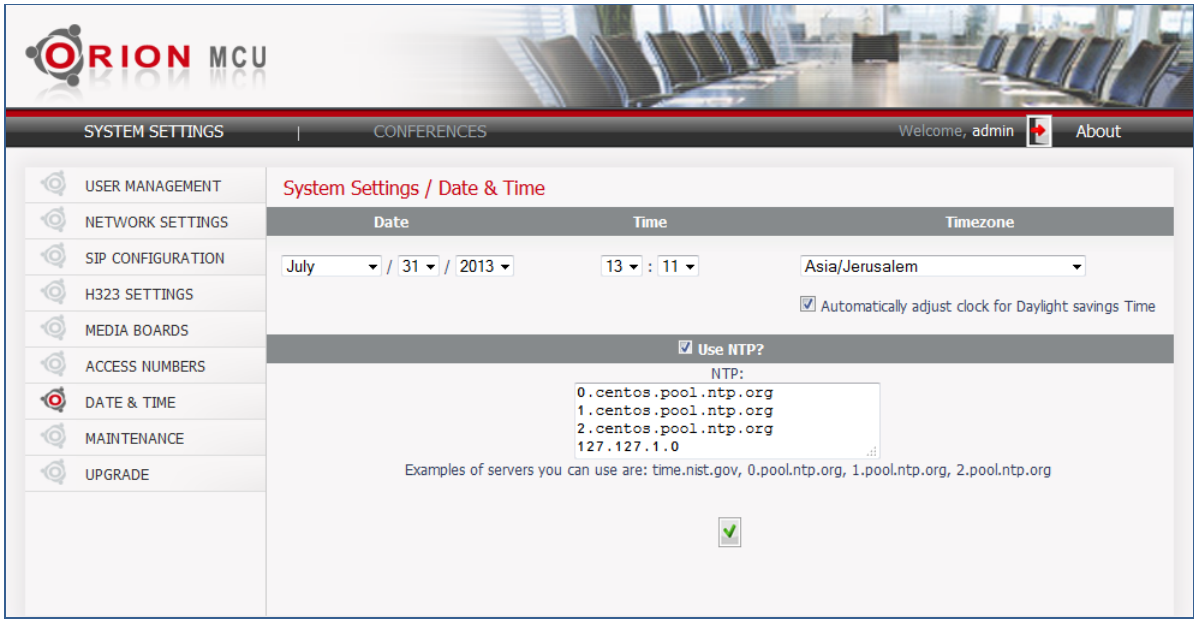

Figure 6-21: Date and Time Screen

2. Select the current **Date**.
3. Select the current **Time**.
4. Select the relevant **Timezone**.
5. To automatically adjust the time for daylight savings time, select **Automatically adjust clock for daylight savings time**.
6. To have an NTP server sync the Orion VX1000/VX2000 with other devices on the network
   a. Select **Use NTP?**
   b. Select a server from the **NTP** list.
   c. To add a new server, enter a new line to the server's list.
   d. To delete an existing server, remove the line from the list.

      If more than one NTP server appears in the list, the first server in the list has the highest priority.
7. Click **Save** .

6.6 Maintenance

The following maintenance actions can be performed:

- **System Status** - Provides the status of system components, NFS, and general system information, as shown in Figure 6-22:

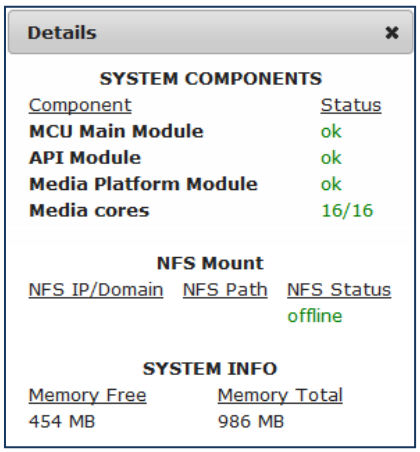

Figure 6-22: System Details

- **NFS Settings** – Enables the user to set the NFS (Network File System) parameters, used for conference recording. For more information on NFS Settings, refer to section 6.6.2 below.
- **Application Restart** - The software application restarts and all ongoing sessions are dropped. User is requested to confirm this operation.
- **Hardware Reset** – Reboots hardware. This process is a longer process, taking around 1 minute. It is recommended to log out and re-log into the system after hardware reset. User is requested to confirm this operation.
- **MCU Shutdown –** Enables the system shut-down. When shut-down, the server will completely power off. User is requested to confirm this operation. To restart the system's operation, the user needs to manually power-on the system.
- **Start Diagnostic Trace –** System events are collected during a specified interval and saved, creating a trace file for advanced diagnostics. For more information, please refer to section 6.6.2 below.

To Perform System Maintenance:

1. Select **System Configuration > Maintenance**. The Maintenance window opens.

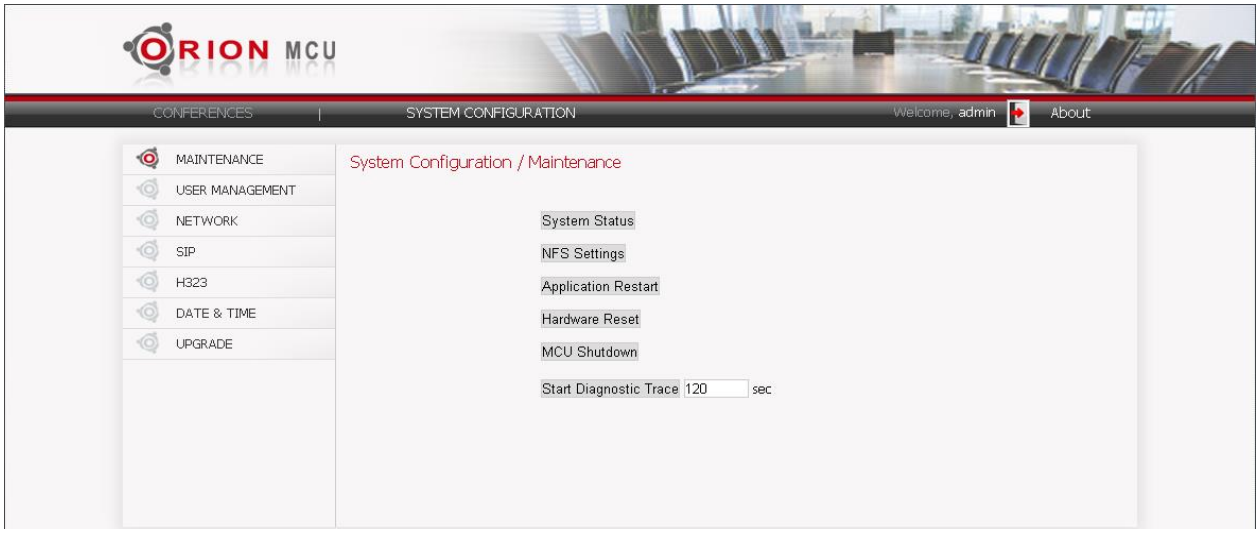

Figure 6-23: Maintenance Window

2. Click a button to perform the action specified.

6.6.1 NFS Settings

To Set the NFS Parameters:

1. Select **System Configuration > Maintenance**. The Maintenance window opens.
2. Click on **NFS Settings.** The following window opens:

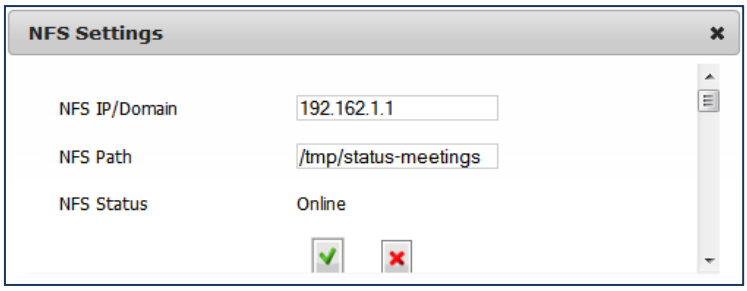

Table 6-7: NFS Settings

3. Enter the **NFS IP/Domain**
4. Enter the **NFS Path** which locates the recorded conference.
5. **NFS Status** is a read-only parameter and can have the values: **Online** and **Offline**.
6. Click **Save** to save the settings.
7. Click **Clear** to clear the settings**.** If the user clicks on **Clear**, the following dialogue box appears for a confirmation request:

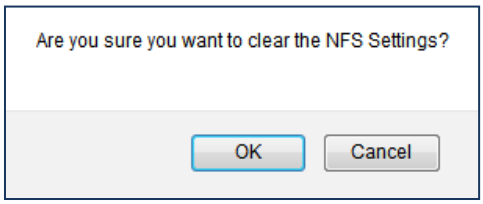

6.6.2 Start Diagnostic Trace

To Provide Diagnostic Trace to Surf Support Stuff:

1. Select **System Configuration > Maintenance**. The Maintenance window opens.
2. Enter the interval for information collection in the text-box. The allowed range is between “0” to “300” seconds.
3. Click on **Start Diagnostic Trace**

4. The system creates a package with the system configuration, log files in debug level and IP trace of all the system network interfaces for the duration of the diagnostic trace. If the selected interval is set to “0”, the system will create a package with system configuration and logs only (without traffic capture).
5. A diagnostic file (zip file) is created. Click **Save Diagnostic Trace** to save the file.

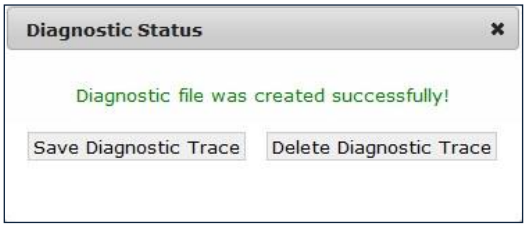

Figure 6-24: Diagnostic Dialog Box

6. After saving the file, **Delete Diagnostic Trace**, appears on the main **Maintenance** screen, allowing the user to delete the file.
7. Only one trace file is allowed. To provide a new trace file, the existing file must be deleted.

6.7 Upgrade

The user can upgrade the system using the **Upgrade** window, as shown in Figure 6-24.

To Upgrade the System:

1. Select **System Configuration > Upgrade**. The Upgrade window opens:

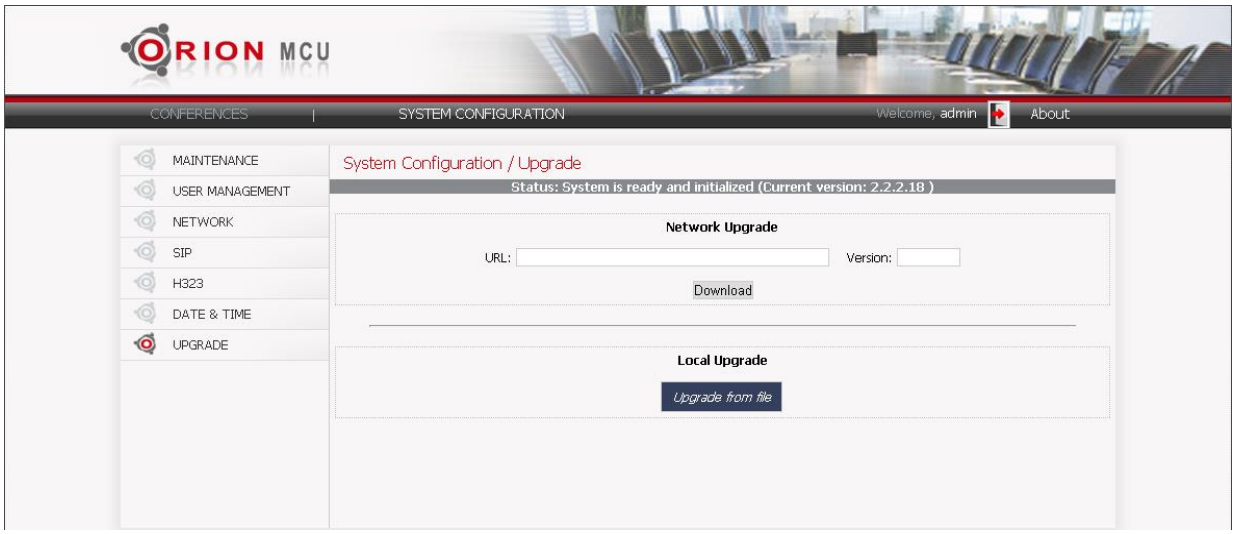

Figure 6-25: Upgrade Window

2. Choose one of the two upgrade modes:

- For Network Upgrade:
  a. In the **URL** text-box, type the Orion VX1000/VX2000's upgrade server's address: **update.orionmcu.com.** If **DNS** has not been set (**Network Settings** section 6.5.1), use its IP address: **23.23.229.203**.
  b. In **Version** text-box, enter the version number to be downloaded (will be supplied by Surf support, upon the release of a GA version).
  c. Click Download

- For Local Upgrade
  a. Click on Upgrade from file.
  b. Browse, and select the download package

3. The software download starts and the following figure appears:

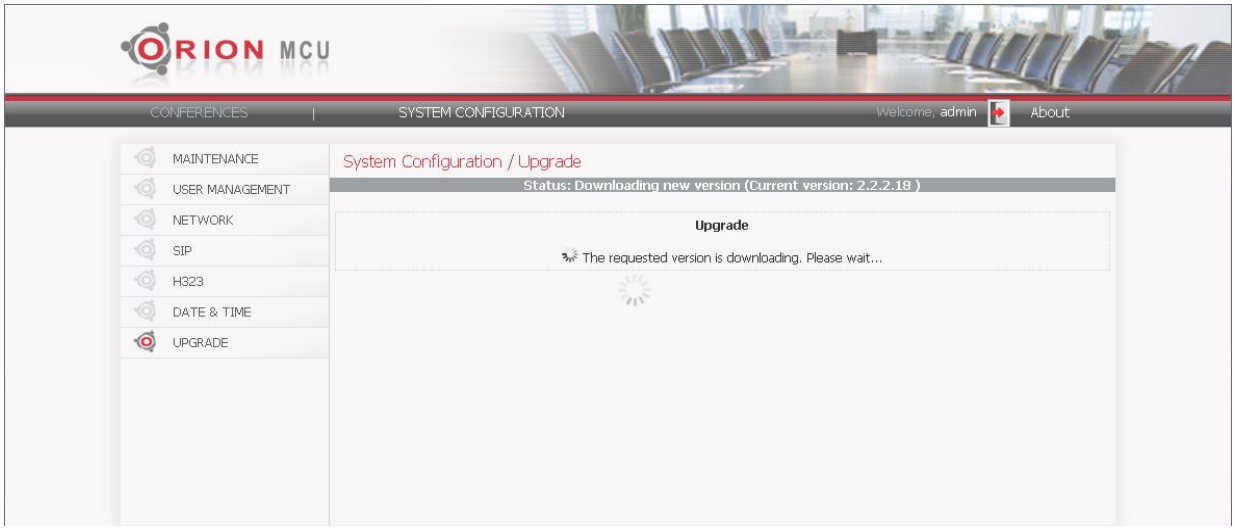

Figure 6-26: Starting the Download

4. After the download is finalized, a dialogue box is displayed enabling the user to either abort or continue the upgrade process:

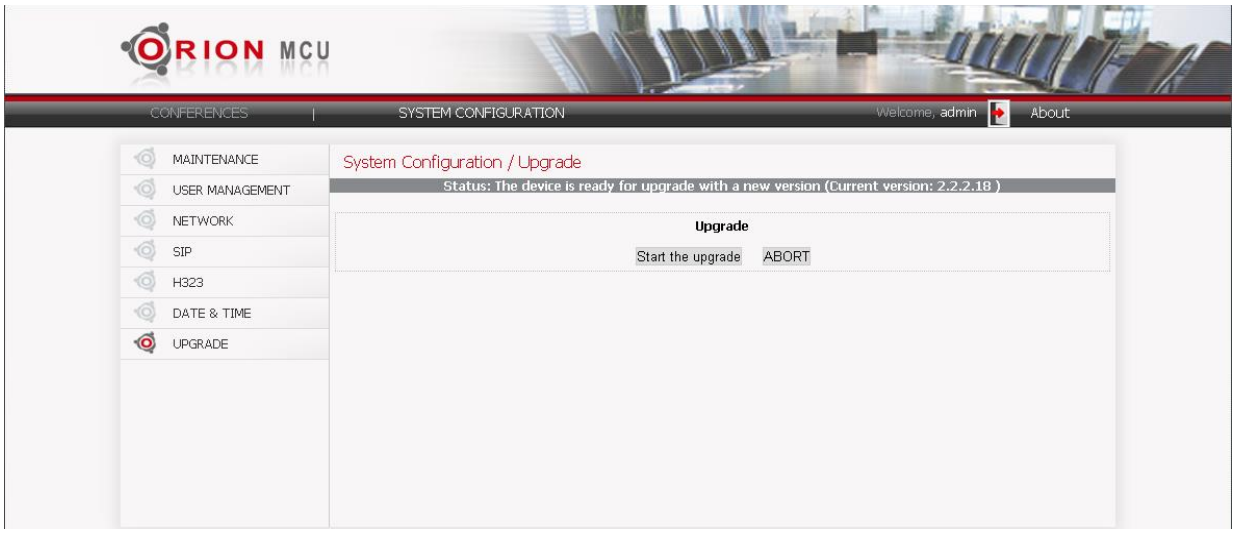

Figure 6-27: Upgrade Starting

5. If the user chooses to continue, the system upgrades:

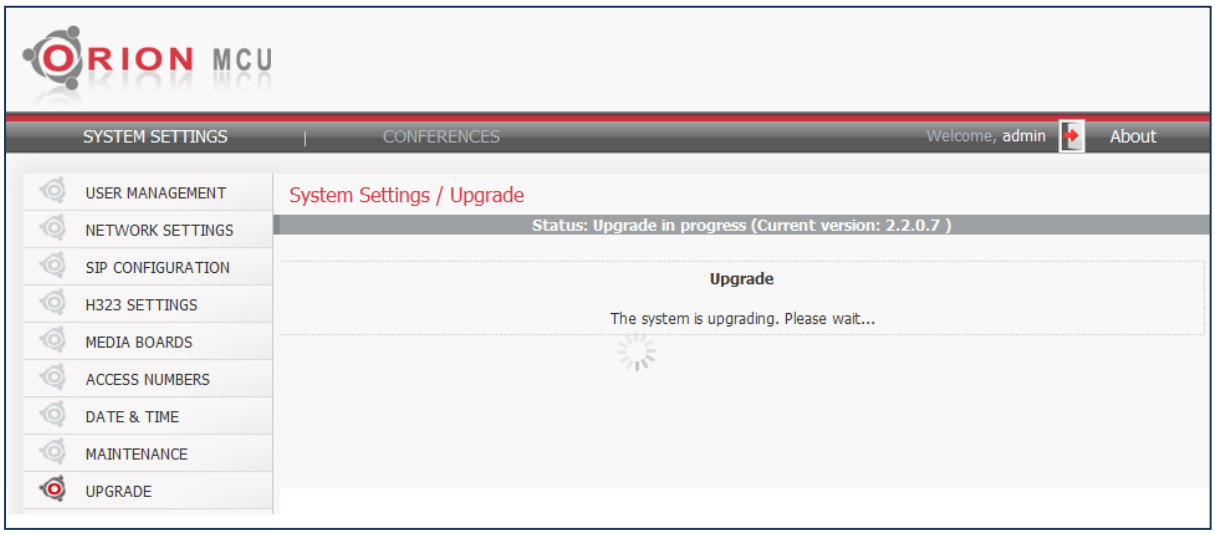

Figure 6-28: Upgrading

6. The system reboots automatically after the upgrade. To continue login to the system.

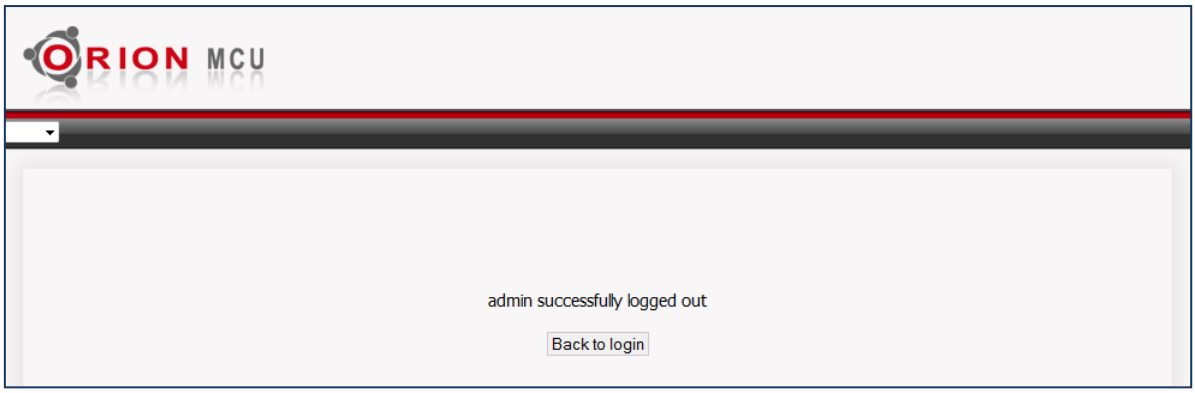

Figure 6-29: Upgrade Finalized

7. Conferences

After system parameters have been provisioned, conferences can be set up.

7.1 Summary

Select **Conferences > Summary** to view the list of the existing active conferences:

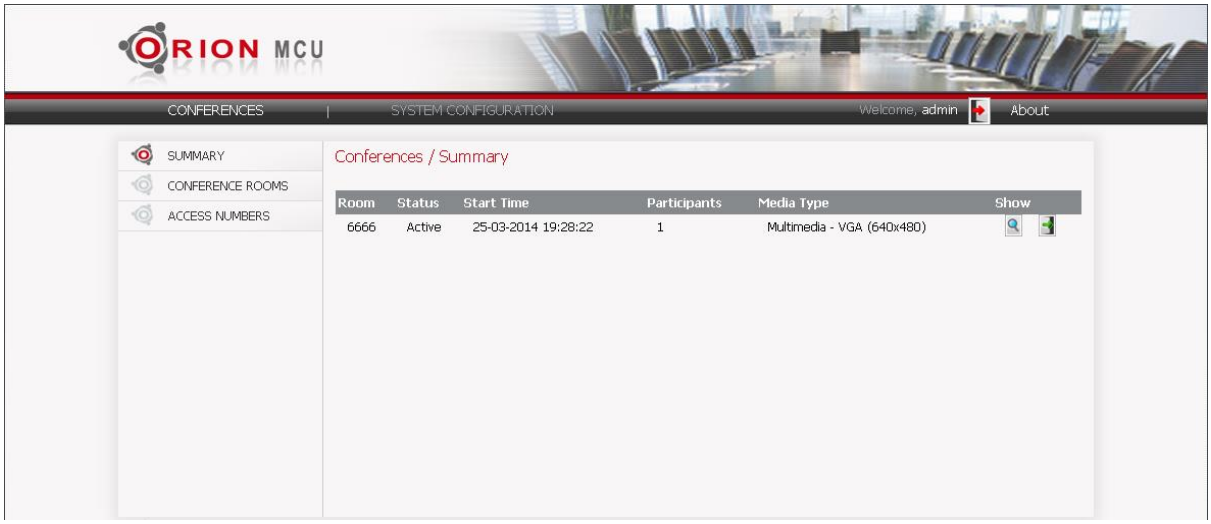

Figure 7-1: Conferences List

Please note that the users can view and set only the conferences which belong to their own group (see section 6.4.1 for **Multi-Tier Partitioning)**.

To See the Details of a Conference:

Click **View** .

Figure 7-2 details the selected conference information, including state, type and the list of participants including: telephone number, login time and role.

Figure 7-2: Conference Details

Click **Leader Dashboard**, to open the Leader Dashboard (section 88 below), and manage a conference.

7.2 Conference Settings

The parameters of an existing conference can be viewed or modified and new conferences can be created.

7.2.1 Opening the Conference Settings Window

To Open the Conference Settings window:

Select **Conferences > Conference Rooms**.

The list of the existing conferences is displayed:

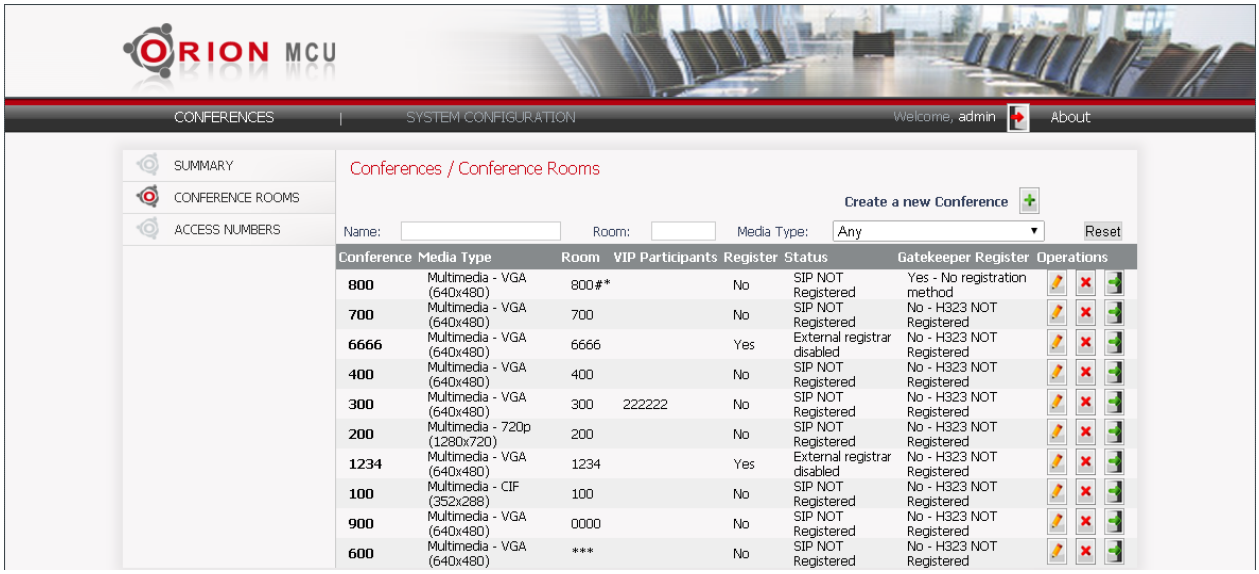
ORION MCU
CONFERENCES
SYSTEM CONFIGURATION
Welcome, admin
About
SUMMARY
CONFERENCE ROOMS
ACCESS NUMBERS
Conferences / Conference Rooms
Create a new Conference
Name:
Room:
Media Type:
Any
Reset
Conference Media Type Room VIP Participants Register Status Gatekeeper Register Operations
800 Multimedia - VGA (640x480) 800#* No SIP NOT Registered Yes - No registration method
700 Multimedia - VGA (640x480) 700 No SIP NOT Registered No - H323 NOT Registered
6666 Multimedia - VGA (640x480) 6666 Yes External registrar disabled No - H323 NOT Registered
400 Multimedia - VGA (640x480) 400 No SIP NOT Registered No - H323 NOT Registered
300 Multimedia - VGA (640x480) 300 222222 No SIP NOT Registered No - H323 NOT Registered
200 Multimedia - 720p (1280x720) 200 No SIP NOT Registered No - H323 NOT Registered
1234 Multimedia - VGA (640x480) 1234 Yes External registrar disabled No - H323 NOT Registered
100 Multimedia - CIF (352x288) 100 No SIP NOT Registered No - H323 NOT Registered
900 Multimedia - VGA (640x480) 0000 No SIP NOT Registered No - H323 NOT Registered
600 Multimedia - VGA (640x480) *** No SIP NOT Registered No - H323 NOT Registered

Figure 7-3: Conference Management

The following values can appear under the **Media Type** column:

- Multimedia - 720p - (1280x720)
- Multimedia - VGA - (640x480)
- Multimedia - CIF - (352X288)
- Voice Only

7.2.2 Sorting and Filtering

The columns **Conference, Room** and **Media Type** can be sorted in ascending or descending order by clicking on a column header.

The user is allowed to filter the users' database, using the toolbar at the top of the screen, and according to the parameters listed below:

- **Name.** A full conference name or a partial string from it.
- **Room.** A full or partial room (conference) number.
- **Media Type.** The media type, using the drop-down menu.

Pressing on **Reset**, resets the filter and the original list re-appears on the screen.

7.2.3 Creating a Conference

To create a new conference:

1. Click **Create a new Conference** .

   The **Create a new Conference** window opens.

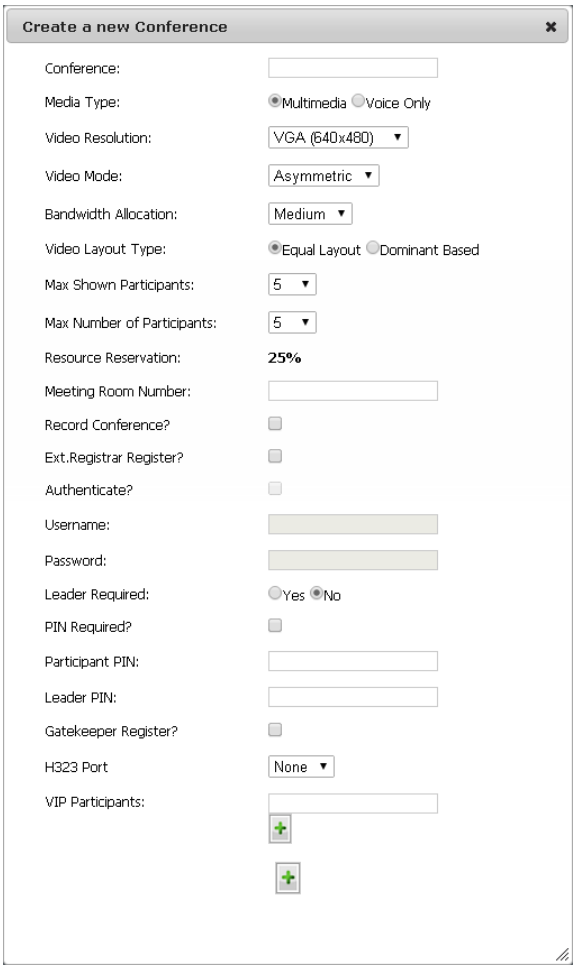

Figure 7-4: New Conference Details

2. Select conference parameters as described in section 7.3, Conferencing Parameters.

3. Click **Save**, to save the entered information.

7.2.4 Other Conference Actions

You can edit conferences, delete conferences, and open the **Leader Dashboard** to manage a conference from the **Operations** column of the **Conference Settings** window.

To Edit a Conference:

Click **Edit**. Then edit conference parameters as described in Conferencing Parameters.

To Delete a Conference:

Click **Delete**.

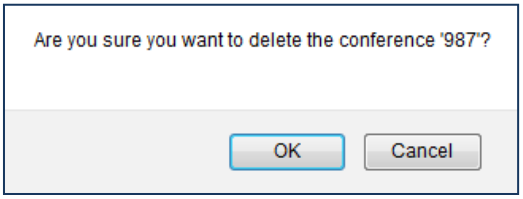

To Manage a Conference:

Click **Leader Dashboard**, to open the **Leader Dashboard**. See section 8 Leader Dashboard.

7.3 Conferencing Parameters

Conferencing parameters are listed in the below table:

Parameter	Values	Remarks
Conference	String	The nickname of the conference
Media Type	Multimedia Voice Only	The type of conference to be defined, Multimedia for video conference or Voice only for Voice conference.
Video Resolution	720p (1280x720) VGA (640x480) CIF (352X288)	The video resolution of the conference appears only if **Multimedia** has been chosen for the **Media Type** parameter (see above).
Video Mode	Asymmetric Symmetric	Asymmetric: The transmitted and the received video resolutions are not identical. Symmetric: The transmitted and the received video resolutions are identical. The received video resolution is set via the Media Type parameter, above. For 720p and VGA resolutions both modes can be selected (default= "Asymmetric"). For CIF resolution only “Symmetric” mode is available.
Bandwidth Allocation	Low Medium High	SURF recommends using “Medium” as a default value, hence every new conference room’s “Bandwidth Allocation” parameter will be configured as “Medium”. If the bandwidth in the LAN or WAN, where the Orion VX1000/VX2000 is deployed, is low, please set the conference room’s “Bandwidth Allocation” parameter to “Low”. If there are no bandwidth restrictions, you may use “High” for enhanced video quality.
Video Layout Type	Equal Layout Dominant Based	The type of the video conference layout.

<table>
<tr><th>Parameter</th><th>Values</th><th>Remarks</th></tr>
<tr><td>Max Shown Participants</td><td>Number</td><td>
<table>
<tr><th rowspan="2">Media Type</th><th colspan="2"># of Conferences</th><th rowspan="2">Viewable Participants</th></tr>
<tr><th>Orion-VX1000</th><th>Orion-VX2000</th></tr>
<tr><td rowspan="2">720p Conference - Symmetric</td><td>1</td><td>2</td><td>10</td></tr>
<tr><td>2</td><td>4</td><td>2</td></tr>
<tr><td rowspan="2">720p Conference - Asymmetric</td><td>1</td><td>2</td><td>16</td></tr>
<tr><td>2</td><td>4</td><td>6</td></tr>
<tr><td rowspan="4">VGA Conference - Symmetric</td><td>1</td><td>2</td><td>16</td></tr>
<tr><td>2</td><td>4</td><td>10</td></tr>
<tr><td>3</td><td>6</td><td>4</td></tr>
<tr><td>4</td><td>8</td><td>2</td></tr>
<tr><td rowspan="4">VGA Conference - Asymmetric</td><td>1</td><td>2</td><td>16</td></tr>
<tr><td>2</td><td>4</td><td>16</td></tr>
<tr><td>3</td><td>6</td><td>12</td></tr>
<tr><td>4</td><td>8</td><td>6</td></tr>
<tr><td rowspan="4">CIF Conference</td><td>1</td><td>2</td><td>16</td></tr>
<tr><td>2</td><td>4</td><td>16</td></tr>
<tr><td>3</td><td>6</td><td>16</td></tr>
<tr><td>4</td><td>8</td><td>10</td></tr>
<tr><td>Voice Conference</td><td>6</td><td>6</td><td>-</td></tr>
</table>
</td></tr>
<tr><td>Max Number of Participants</td><td>Number</td><td>Up to 29 participants for equal based layout or up to 12 participants for dominant based layout.</td></tr>
<tr><td>Meeting Room Number</td><td>Number</td><td>The meeting room (conference) can be accessed by direct dialing, if it is registered.
Meeting room number is also used as username for the leader dashboard login.
Note: conference number <u>must not</u> be equal to SIP user number or access number defined in the system.</td></tr>
<tr><td>Record Conference?</td><td>Yes/No</td><td>If enabled the conference shall be recorded. Please note that the NFS parameters should be defined prior the activation of the conference recording. For NFS settings, refer to section 6.6.1 above.
The conference shall be recorded in the configured pathname under the name: conferencenumber_date.time.avi For example: 400_2013.06.02.13.53.47.avi
The recording shall be stopped when the conference is closed.</td></tr>
<tr><td>Ext.Registrar Register?</td><td>Yes/No</td><td>If enabled then the conference is registered to the external registrar.</td></tr>
<tr><td>Authenticate?</td><td>Yes/No</td><td>If enabled then the conference is registered with authentication.</td></tr>
<tr><td>Username</td><td>String</td><td>If authentication chosen, a username needs to be entered.</td></tr>
<tr><td>Password</td><td>String</td><td>If authentication chosen, password needs to be entered.</td></tr>
<tr><td>PIN Required?</td><td>Yes/No</td><td>If enabled, the participant is required to enter PIN number to log into the conference.</td></tr>
<tr><td>Participant PIN</td><td>Number</td><td>The participant PIN for logging into the conference</td></tr>
<tr><td>Leader PIN</td><td>Number</td><td>The conference leader PIN (should be different from the participant PIN). Also used as password for the leader dashboard login.</td></tr>
<tr><td>Leader Required</td><td>Yes/No</td><td>Defines if the conference can start before the leader joins the conference or not, if configured yes all regular participant will be placed on hold until the leader joins to the conference.</td></tr>
</table>

Parameter	Values	Remarks
Gatekeeper Register?		If enabled then the conference is registered to gatekeeper.
H.323 Port		For H.323 sessions, enables the user to select a port from the listed ports, using the drop-down menu
VIP Participants	List of numbers	Participants' phone numbers or SIP URIs who can join the conference without entering a participant PIN codes.

Table 7-1: Conferencing Parameters

At the end of the parameters' list, the resources that the created conference, out of the total resources of the system, occupies shall be displayed.

7.4 Dialing Options

In order to join a conference from a video room system, phone or a softclient, the user can use the access number or the conference number. The following tables show various dialing options per each choice, using the below numbers:

- Access Number – 500
- Conference Number – 100
- Participant PIN Code – 1
- Orion VX1000/VX2000 Domain – Orion.com (Domain name or IP address).

Participant is registered on PBX:

Dialing Option	PIN Code	Operations and Prompts
Access Number	√	Dial 500 – Prompt: *"Please enter your conference number followed by the # key"* Dial 100 – Prompt: *"Please enter the conference PIN number followed by the # key"* Dial 1 – Connected to conference
Conference Number	√	Dial 100 – Prompt *"Please enter the conference PIN number followed by the # key"* Dial 1 – Connected to conference
Access Number		Dial 500 – Prompt *"Please enter your conference number followed by the # key"* Dial 100 – Connected to conference
Conference Number		Dial 100 – Connected to conference

Table 7-2: Dialing Information - Registered on PBX

Participant is registered on Orion VX1000/VX2000 SIP Build-in Registrar:

Dialing Option	PIN Code	Operations and Prompts
Access Number	√	Dial 500 – Prompt "*Please enter your conference number followed by the # key*" Dial 100 – Prompt "*Please enter the conference PIN number followed by the # key*" Dial 1 – Connected to conference **Alternative option (Connecting without prompts):** Dial 500*100*1 – Connected to conference
Conference Number	√	Dial 100 – Prompt "*Please enter the conference PIN number followed by the # key*" Dial 1 – Connected to conference
Access Number		Dial 500 – Prompt "*Please enter your conference number followed by the # key*" Dial 100 – Connected to conference
Conference Number		Dial 100 – Connected to conference

Table 7-3: Dialing Information - Registered on Orion VX1000/VX2000

Participant is not registered:

Dialing Option	PIN Code	Operations and Prompts
Access Number	√	Dial 500@Orion.com – Prompt "*Please enter your conference number followed by the # key"* Dial 100 – Prompt "*Please enter the conference PIN number followed by the # key*" Dial 1 – Connected to conference **Alternative option (Connecting without prompts):** Dial 500*100*1@Orion.com – Connected to conference
Conference Number	√	Dial 100@Orion.com – Prompt "*Please enter the conference PIN number followed by the # key*" Dial 1 – Connected to conference
Access Number		Dial 500@Orion.com – Prompt "*Please enter your conference number followed by the # key*" Dial 100 – Connected to conference
Conference Number		Dial 100@Orion.com – Connected to conference

Table 7-4: Dialing Information - Not Registered

8. Leader Dashboard

8.1 Leader's Capabilities

The Leader Dashboard provides the following capabilities to the conference leader:

- **Invite participants to join the conference**
- **Modify the status of the participant from dominant to non-dominant and vice versa**
- **Make a participant visible/invisible**
- **Obtain call statistics**
- **Mute/Unmute participants**
- **Lock/Unlock the conference**
- **View detailed conference parameters**
- **Remove participants from the conference**
- **Modify the conference layout mode.**

8.2 Leader Login

The leader logs into the Leader Dashboard through the regular login screen, by using the conference number as username and the leader PIN code as password, as shown below in Figure 8-1:

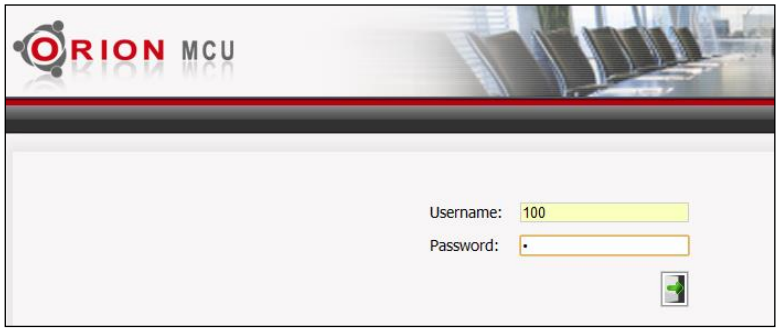

Figure 8-1: Leader Login

8.3 Main Screen

Figure 8-2 below shows the **Leader Dashboard**'s main window:

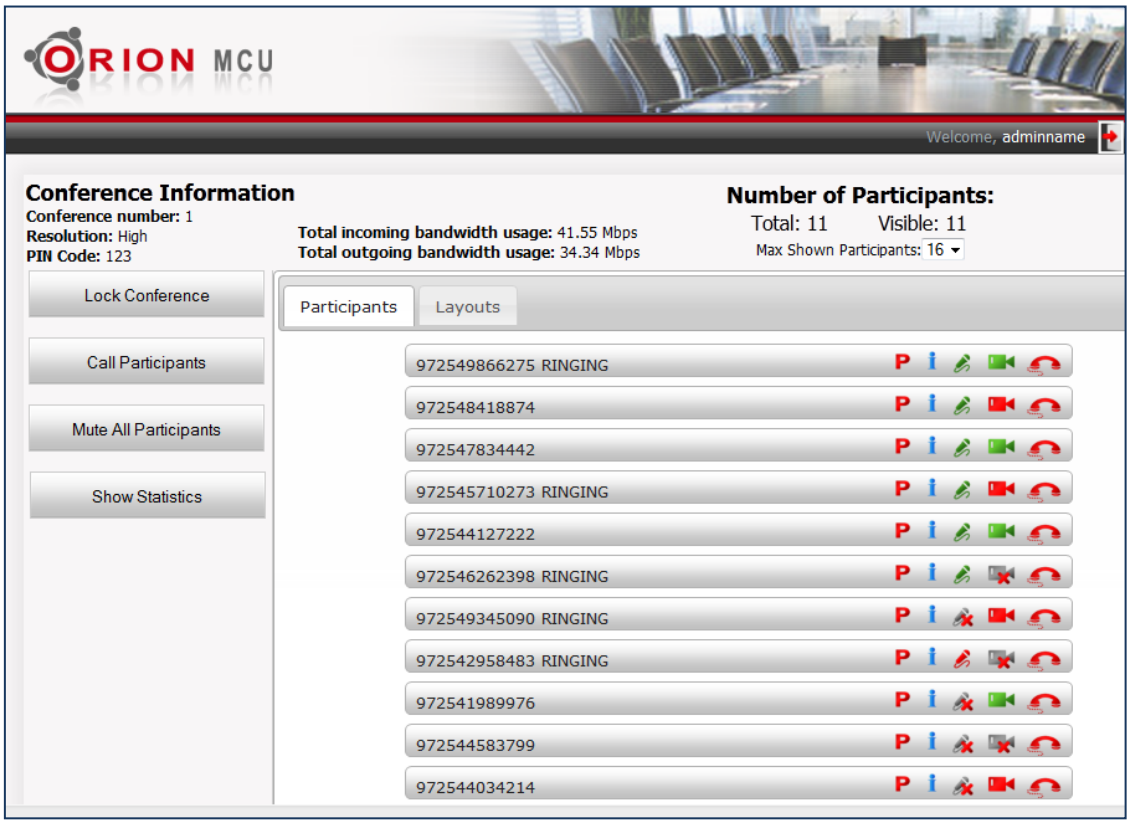

Figure 8-2: Leader Dashboard Main Window

On the main screen of the leader dashboard, the following items are displayed:

- **Conference Information** – Conference information includes conference number, resolution and the PIN code.
- **Total Bandwidth** - Total bandwidth usage of incoming and outgoing sessions, updated every 5 seconds - displayed at the top of the toolbar.
- **Number of Participants** – Showing the number of total and visible participants and enabling the leader to select the number of shown participants, using a drop down menu.
- **Operational Buttons –** The following operational buttons appear at the left side of the Leader Dashboard window:
  - **Lock/Unlock Conference –** Locking the conference prevents the users that are not currently a part of the conference session, to join the conference.
  - **Call Participants** – Enables the leader to invite participants to join the conference.
  - **Mute/Unmute All Participants**
  - **Show Statistics** – Displays the conference's detailed statistics information (section 8.5 below).
- Toolbar which includes Participants and Layout options (section 8). Participants screen provides the default display of the main screen.

- The list of the conference participants followed by icons - Each participant in the list is followed by icons. Each icon represents an information about the participant's state or /and enables the user to toggle between the states, by clicking on it.

  The icons and the state they represent are listed in Figure 8-3 below:

Dominant participant	**Participant (not Dominant)**	
Call statistics		
Participant voice enabled	**Video only participant (status)**	**Participant voice muted**
Visible, participant	**Voice only participant (status)**	**Participant video disabled**
Remove participant		

Figure 8-3: Leader Dashboard Icons

When the user modifies a participant to a dominant participant, the energetic calculations are not relevant for this participant. The participant remains dominant until the **Dominant participant** icon is pressed again or another participant is selected as dominant.

Figure 8-4 shows a participant's call statistics information, appears upon clicking on :

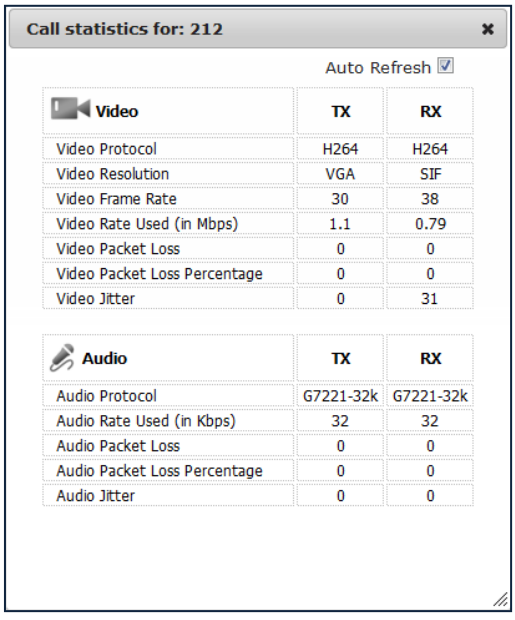

Figure 8-4: Call Statistics

8.4 Layouts

To set the conference layout mode, click the **Layouts** tab on the main leader dashboard screen. Figure 8-5, shows the current and the possible layouts:

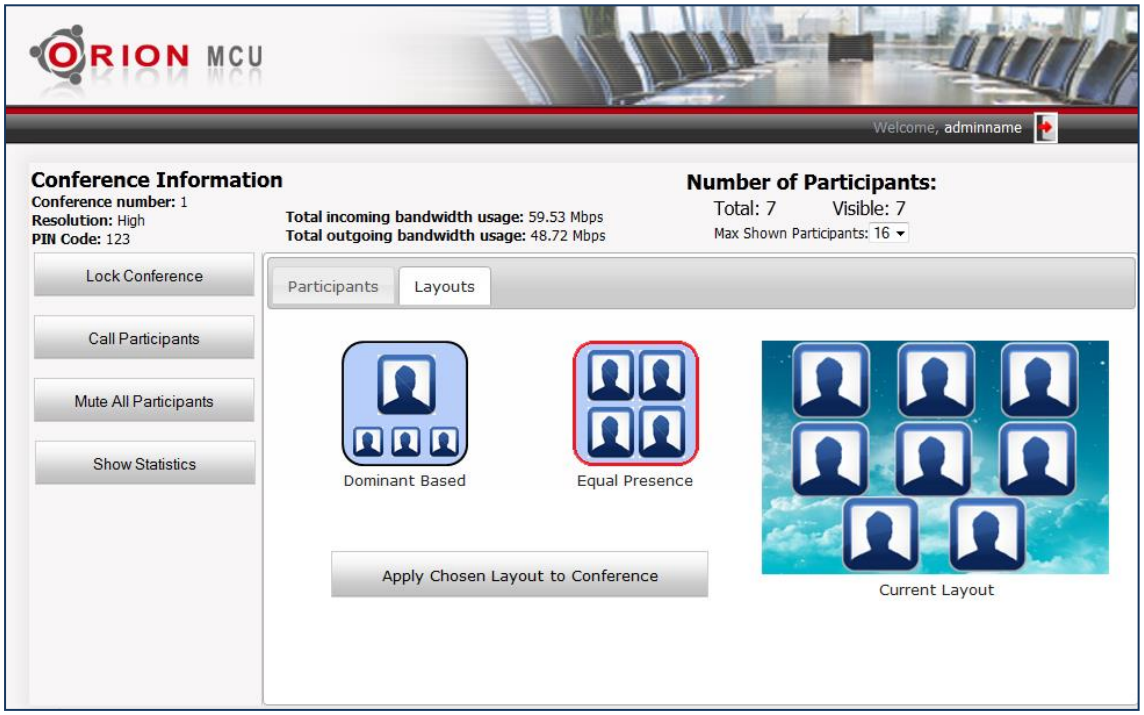

Figure 8-5: Conference Layouts

One of two layouts can be chosen:

- **Dominant based**: The dominant speaker's image is larger than the other participants' images (The dominant speaker is automatically defined by energetic voice detection).
- **Equal Presence**: All the images are displayed equally.

The red border shows the chosen layout. Click **Apply Chosen Layout to Conference** to select a layout.

8.5 Show Statistics

To view the conference statistics details, click the **Show Statistics** button on the left side of the leader dashboard screen. Figure 8-6 showing the statistics information of all the conference participants:

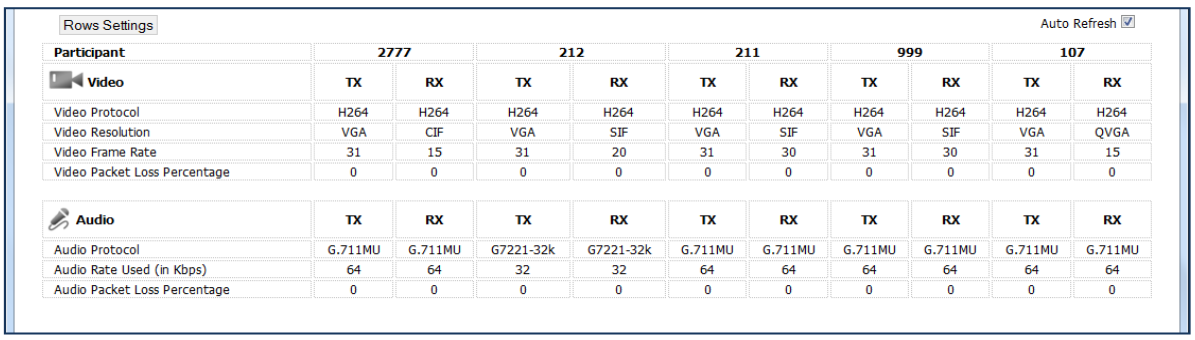
Rows Settings
Auto Refresh
Participant 2777 212 211 999 107
Video TX RX TX RX TX RX TX RX TX RX
Video Protocol H264 H264 H264 H264 H264 H264 H264 H264 H264 H264
Video Resolution VGA CIF VGA SIF VGA SIF VGA SIF VGA QVGA
Video Frame Rate 31 15 31 20 31 30 31 30 31 15
Video Packet Loss Percentage 0 0 0 0 0 0 0 0 0 0
Audio TX RX TX RX TX RX TX RX TX RX
Audio Protocol G.711MU G.711MU G7221-32k G7221-32k G.711MU G.711MU G.711MU G.711MU G.711MU G.711MU
Audio Rate Used (in Kbps) 64 64 32 32 64 64 64 64 64 64
Audio Packet Loss Percentage 0 0 0 0 0 0 0 0 0 0

Figure 8-6: Conference Statistics

Use the horizontal scroll bar to view all the participant's information.

Set the **Auto Refresh** check-box to update the displayed information automatically. The information is updated every 5 seconds.

The rows in the statistics table above can be set or reset by clicking on the **Rows Settings** button. As shows in Figure 8-7:

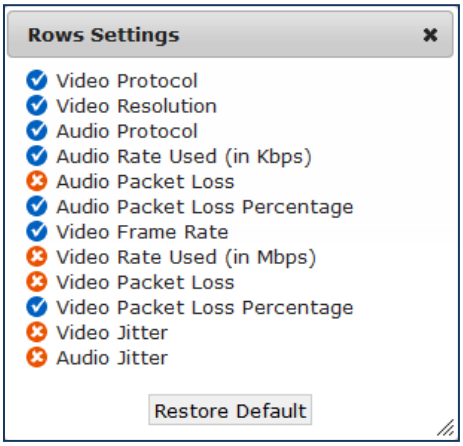

Figure 8-7: Rows Settings

Click on **Restore Default** to restore the original rows settings.

8.6 Calling Participants

To invite participants to join a conference:

1. Click the Call Participants button.

   The **Call Participants** window opens as shows in Figure 8-8:

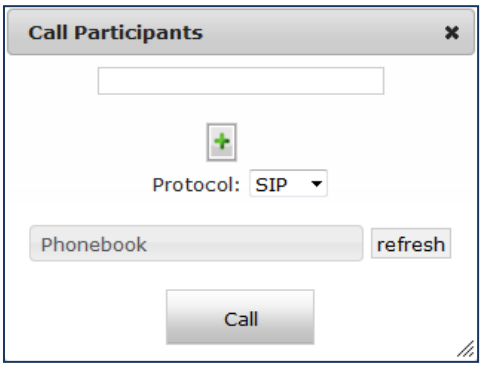

Figure 8-8: Calling Participants

2. Choose one of the following options:

   2.1 Use the text-box, You can enter one of the following:

   - **For registered participant**: Enter the name/number appears in the registration to SIP registrar
   - **For non-registered participant**: Enter the full path including the SIP server IP address: name/number@SIP server-IP-Address

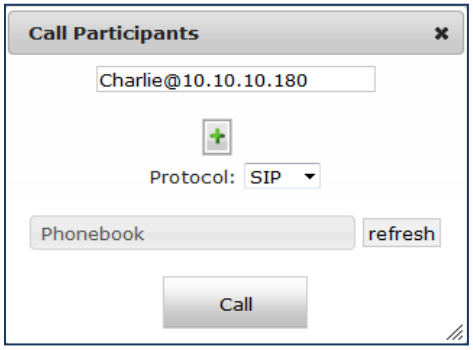

- Click to add more participants and then click Call.
- Click to cancel the invitation.

2.2 Use the phone-book:

- Point on the Phonebook text-box with the cursor and click on it.
- The Phonebook window pops-up:

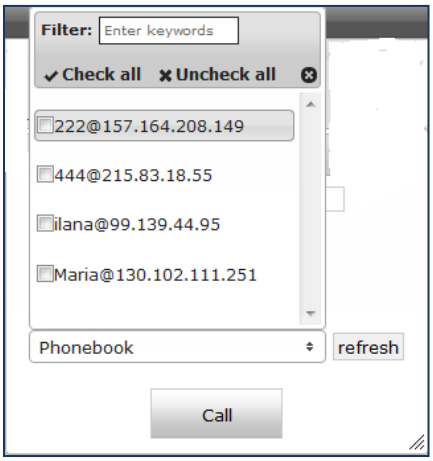

- Check the participants you want to invite and click Call.
- You can check/uncheck the entire list or filter the list by using the toolbar at the top of the window. To return back to the original list, press Refresh.

9. Firewall and NAT

9.1 Overview

Orion VX1000 provides voice and video conferencing services for SMBs and enterprises, and is naturally located either in a demilitarized zone (DMZ) with a public or private IP address or in a LAN behind the organization's Firewall/NAT (Network Address Translation) with a private IP address. The Orion VX1000/VX2000 may also reside in a public IP.

Firewalls that are not SIP and H.323 aware may cause complexity in providing connectivity with clients, located in the external IP network or behind other firewalls.

This section describes the possible topologies, firewall/NAT settings, and NAT traversal in Orion VX1000/VX2000.

9.2 Topologies

9.2.1 Orion VX1000/VX2000 in a DMZ

When Orion VX1000/VX2000 is located in the DMZ, it allows you to assign to it a public or private IP address. This enables an easy access and direct connectivity with video clients in the public internet as shown below in Figure 9-1:

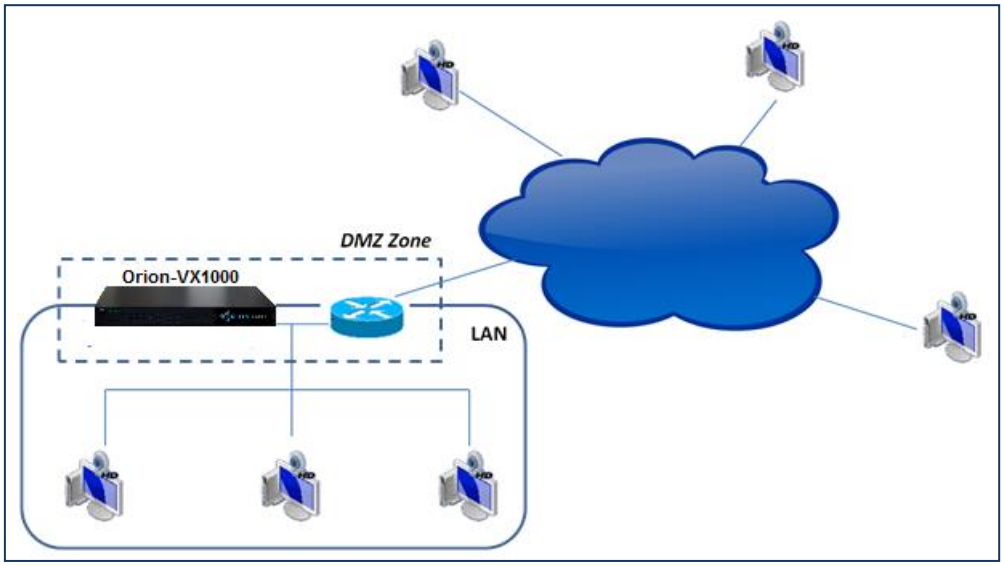

Figure 9-1: Orion VX1000 in DMZ Zone

9.2.2 Orion VX1000/VX2000 behind a NAT

When Orion VX1000/VX2000 system is located behind a NAT, in a private LAN, it is not accessed directly by the other entities in the internet. This causes a better security on one hand and on the other hand it makes the connectivity with outside world more complicated. When deploying the Orion VX1000/VX2000 in this topology, it is required to provide port mapping to the Orion VX1000/VX2000. As shown below in Figure 9-2:

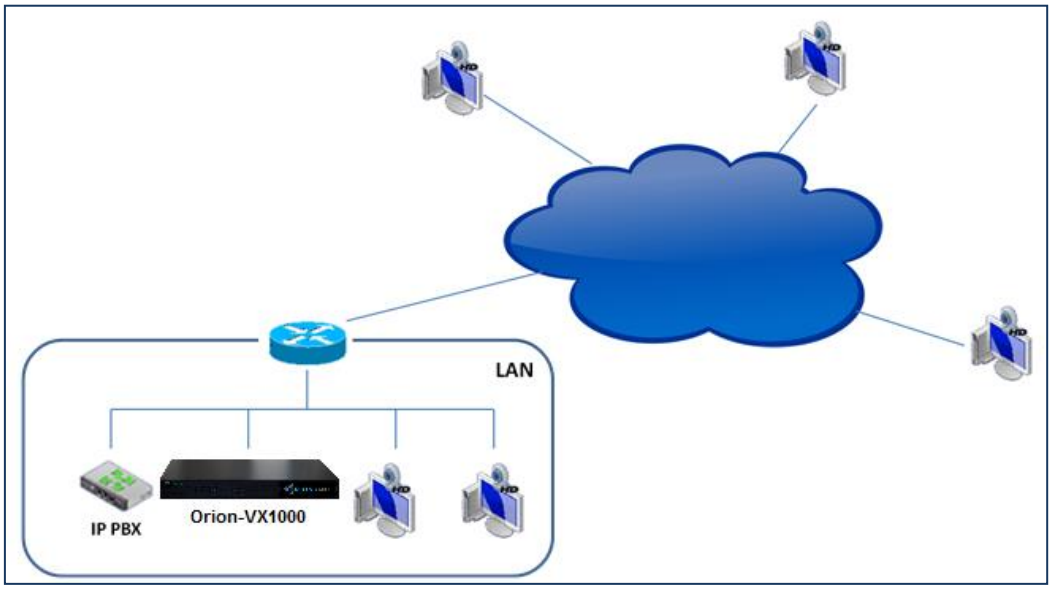

Figure 9-2: Orion VX1000 Located in LAN

9.3 Firewall/NAT Settings

In order to use a firewall/NAT, it is recommended to follow the below settings:

9.3.1 Blocking Ports

Block the access, from the external IP network, to the following ports:

- 22 (ssh)
- 23 (telnet)
- 80 (http)
- 443 (https)

You may let them remain open for internal administrative operations.

9.3.2 Enabling SIP and H.323 Sessions

To enable SIP and H.323 setup with other entities in the external network, the firewall/NAT router must be configured to allow incoming and outgoing SIP messages through:

- UDP and TCP port 5060 (for SIP session signaling)
- TCP port 5061 (for SIP TLS)

- TCP and UDP ports [1720 - 17xx] for H.323. (17xx = 1720+Number of Additional H.323 ports)

9.3.3 RTP Traffic Ports Range

The range of the UDP ports for the incoming and outgoing RTP packets need to remain open in the firewall/NAT. Orion VX1000/VX2000 communicates through:

- UDP 10000-11000
- UDP and TCP 12000-12500

The actual range can be restricted within the default one, depending on number of conferences, participants per conference, conference type and Orion VX1000/VX2000's model you are using.

9.4 NAT Traversal in Orion VX1000/VX2000

9.4.1 Near-End NAT Traversal

In a deployment scenario where Orion VX1000/VX2000 is located behind a firewall and is configured with private IP address, the signaling sent from the Orion VX1000/VX2000 messages will contain private IP addresses. Unless the firewall provides VoIP NAT Traversal services, sessions will not connect, as the signaling messages will contain non-routable addresses. This issue is called Near-End NAT traversal, as the problem to be solved is "near" – meaning the close firewall.

Orion VX1000/VX2000 solves this problem by providing near-end NAT traversal as part of the Orion VX1000/VX2000. The private IP addresses within the SDP are replaced by the NAT's public IP address and the clients receive SIP messages which include SDP with accessible public IP addresses, providing session completion.

9.4.2 Orion VX1000/VX2000 Setting for Near-End NAT Traversal

In order to allow near-end NAT Traversal in Orion VX1000/VX2000, follow the below steps:

1. Select **System Configuration > SIP Configuration**. The below screen opens:

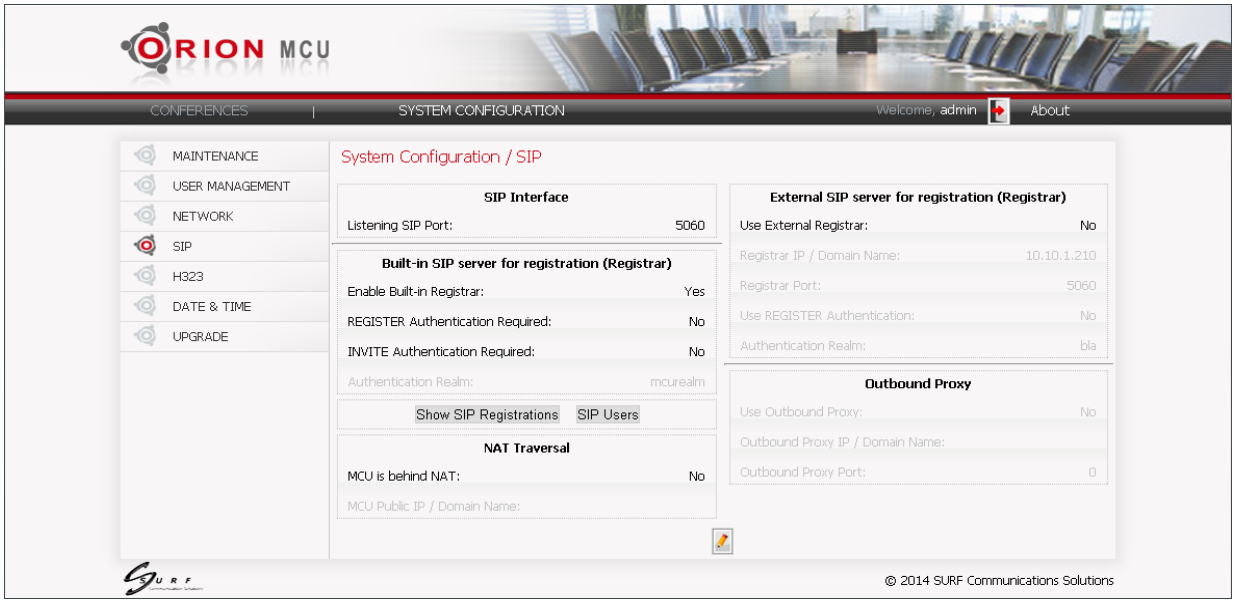

Figure 9-3: SIP Public IP Configuration

2. Click **Edit**. SIP settings become editable.
3. Set the **Enable Build-in Registrar** check-box.
4. Enter a value for Listening SIP Port.
5. Enable the **MCU is behind NAT** check-box.
6. Enter a value for **MCU Public IP / Domain Name**:

or



7. Press **Save** to save the configuration.
8. The system restarts. If **Domain Name** has been entered, the address is resolved.
9. Near-end NAT traversal is applied.

9.4.3 Far-End NAT Traversal

When the SIP client is behind a firewall, Orion VX1000/VX2000 may receive private IP addresses in the received SDP (for sending the session's RTP packets) as shown below in Figure 9-4:

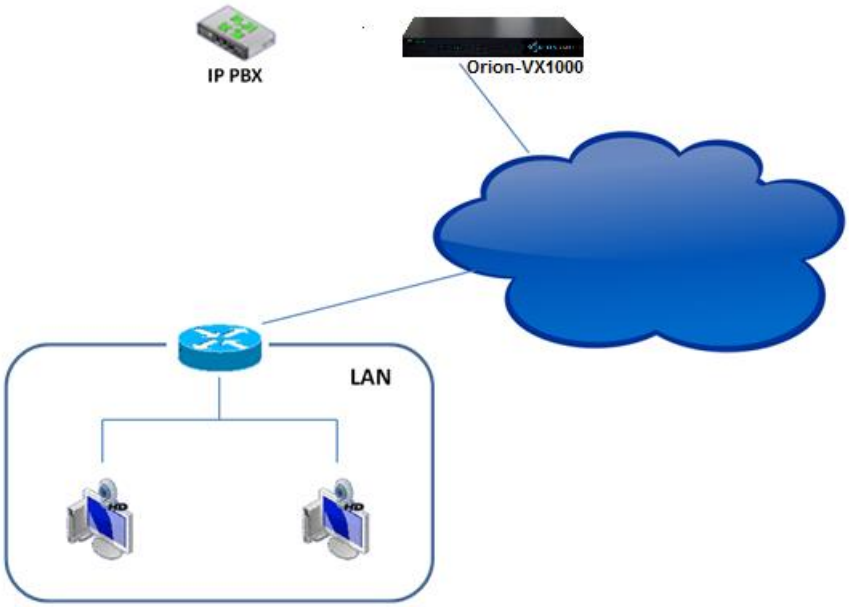

Figure 9-4: SIP Client behind a NAT

In this case, the packets cannot be sent, until the first packets are received from the client. The system learns the actual public IP address of these packets, and sends the transmitted RTP packets to this address.

Far-end NAT traversal is applied automatically thus no configuration is needed in Orion VX1000/VX2000.

Note: Please note that in order for this topology to work, the SIP and H.323 clients located behind the local firewall must support Near-End NAT traversal.

Near End NAT Traversal for SIP Clients requires the SIP clients to send their routable (in most cases Public) IP address in their contact information and r-port parameter.

10.Appendix A: Precautions & Safety

10.1 Rack Precautions

- Ensure that the leveling jacks on the bottom of the rack are fully extended to the floor with the full weight of the rack resting on them.
- In a single rack installation, stabilizers should be attached to the rack.
- In multiple rack installations, the racks should be coupled together.
- Always make sure the rack is stable before extracting a component from the rack.
- Extract only one component at a time - extracting two or more simultaneously may cause the rack to become unstable.

10.2 Server Precautions

- Review the electrical and general safety precautions.
- Determine the placement of each component in the rack before you install the rails.
- Install the heaviest server components at the bottom of the rack first, and then work up.
- Use a regulating, uninterruptible power supply (UPS) to protect the Orion VX1000/VX2000 from power surges, voltage spikes and to keep your system operating in case of a power failure.
- To maintain proper cooling, always keep the rack's front door and all panels and components on the components closed when not servicing.

10.3 System Safety

10.3.1 Electrical Safety Precautions

Basic electrical safety precautions should be followed to protect you from harm and the Orion VX1000/VX2000 from damage:

- Be aware of the locations of the power on/off switch on the chassis as well as the room's emergency power-off switch, disconnection switch or electrical outlet. If an electrical accident occurs, you can then quickly remove power from the system.
- Do not work alone when working with high voltage components.
- Power should always be disconnected from the system when removing or installing main system components. When disconnecting power, you should first shut down the system and then unplug the power cords.
- When working around exposed electrical circuits, another person who is familiar with the power-off controls should be nearby to switch off the power if necessary.
- Use only one hand when working with powered-on electrical equipment. This is to avoid making a complete circuit, which will cause electrical shock. Use extreme caution when using metal tools, which can easily damage any electrical components or circuit boards they come into contact with.

- Do not use mats designed to decrease static electrical discharge as protection from electrical shock. Instead, use rubber mats that have been specifically designed as electrical insulators.
- The power supply power cords must include a grounding plug and must be plugged into grounded electrical outlets.

10.3.2 General Safety Precautions

Follow these rules to ensure general safety:

- Keep the area around the system clean and free of clutter.
- The system weighs approximately 10 lbs (4.5 kg).
- Place the chassis top cover and any system components that have been removed, away from the system or on a table so that they won't accidentally be stepped on.
- After accessing the inside of the system, close the system back up and secure it to the rack unit with the retention screws, after ensuring that all connections have been made.

11.Appendix B: Rack Mounting

The box your chassis was shipped in should include four mounting screws, which you will need if you intend to install the system into a rack.

Choosing a Setup Location

- Leave enough clearance in front of the rack to enable you to open the front door completely (~25 inches).
- Leave approximately 30 inches of clearance in the back of the rack to allow for sufficient airflow and ease of servicing.
- This product is for installation only in a Restricted Access Location (dedicated equipment room, service closet, etc.).

Rack Mounting Considerations

Ambient Operating Temperature: If installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the ambient temperature of the room. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (Tmra).

Reduced Airflow: Equipment should be mounted into a rack so that the amount of airflow required for safe operation is not compromised.

Mechanical Loading: Equipment should be mounted into a rack so that a hazardous condition does not arise due to uneven mechanical loading.

Circuit Overloading: Consideration should be given to the connection of the equipment to the power supply circuitry and the effect that any possible overloading of circuits might have on over current protection and power supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

Reliable Ground: A reliable ground must be maintained at all times. To ensure this, the rack itself should be grounded. Particular attention should be given to power supply connections other than the direct connections to the branch circuit (i.e. the use of power strips, etc.).

Rack Mounting Instructions

This section provides information about installing the Orion VX1000/VX2000 into a rack unit. There are a variety of rack units on the market, which may mean the assembly procedure will differ slightly. You should also refer to the installation instructions that came with the rack unit you are using.

Installing the Chassis into a Rack:

1. Confirm that chassis includes the four mounting screws required to mount the chassis into a rack
2. Align the thru holes of the chassis with the thru holes of the rack.
3. Insert the mounting screws into the thru holes in the front of the chassis and through the thru holes in the rack

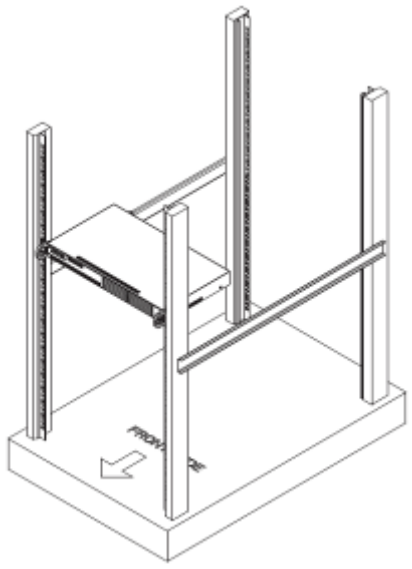

Figure 11-1- Installing Orion VX1000/VX2000 into a Rack

Installing into a Telco Rack

The compact design of the Orion VX1000/VX2000 enables installation into a Telco rack without the use of rails. The installation instructions are similar to the regular rack instructions.

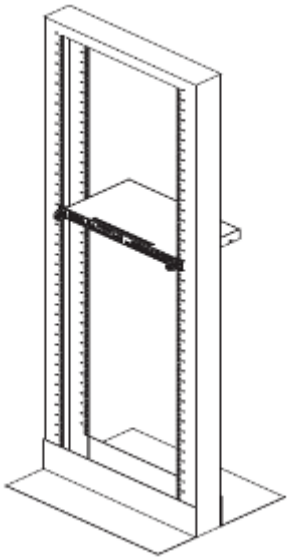

Figure 11-2- Installing Orion VX1000/VX2000 into a Telco Rack

12.Appendix C: Technical Specification

Dimensions (W x D x H): Inches: 16.8 x 11.8 x 1.7 (426 x 300 x 44 mm)

Chassis: 1U Rack mountable

Weight: Net Weight: 7.7 lbs. (3.5 kg)

Package Characteristics

Dimension (W x D x H): 520 x 430 x 190 mm

Weight: 5.5 kg

AC Input Power: 100-240 VAC (auto-range), 50/60 Hz

Power Consumption: 100W max

Operating Environment

Operating Temperature: 10º to 35º C (50º to 95º F)

Non-operating Temperature: -40º to 70º C (-40º to 158º F)

Operating Relative Humidity: 8% to 90% (non-condensing)

Non-operating Relative Humidity: 5 to 95% (non-condensing)

Transportation

Vibration: 2Grms, sine wave, 5~500Hz, 3 axes, 1 hr/axis

Shock: 10G, half sine wave, 11 ms duration

Interfaces

Front I/O Interface: USB: 2 USB 2.0

Rear I/O Interface: Display: VGA

LAN: 2 x RJ45 (10/100/1000)

USB: 1 USB 2.0

PS/2: 1

Web-based GUI

Orion VX1000/VX2000 web based GUI supports Internet Explorer 8 or newer, Google Chrome 20 or newer, Mozilla Firefox 14 or newer and Safari 5 or newer.

End of Document